


PUERTOS DE TK 7102 HKV2 KENWOOD

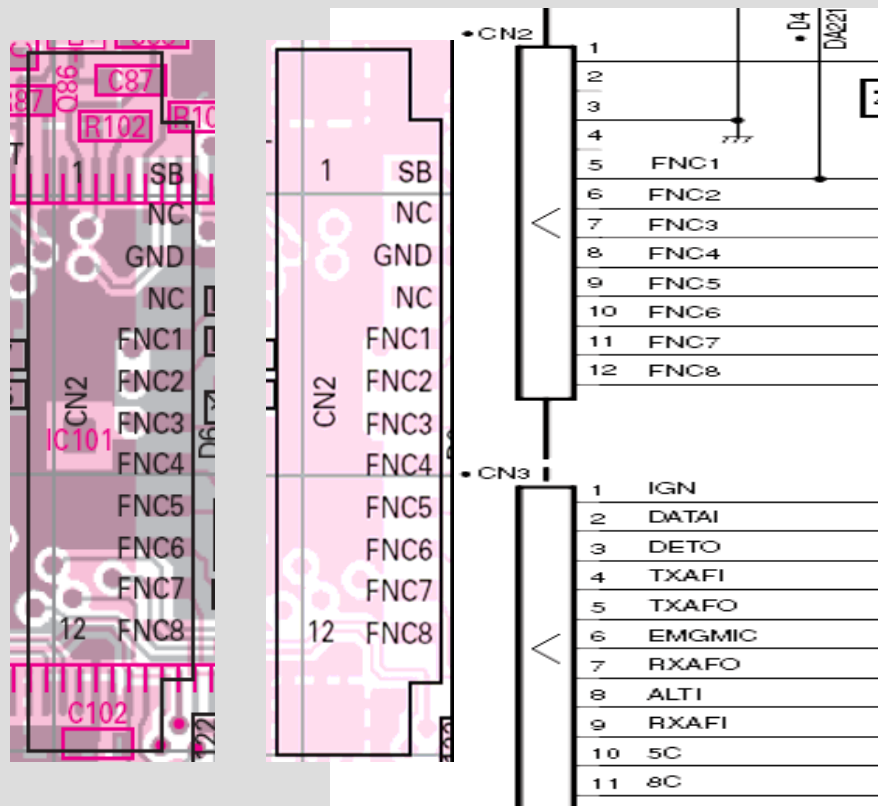

CN2

No.	Name	I/O	Function
1	SB	O	Battery voltage DC supply
2	NC	-	-
3	GND	O	Ground
4	NC	-	-
5	FNC1	I/O	Programmable I/O (programmed by FPU)
6	FNC2	I/O	Programmable I/O (programmed by FPU)
7	FNC3	I/O	Programmable I/O (programmed by FPU)
8	FNC4	I/O	Programmable I/O (programmed by FPU)
9	FNC5	I/O	Programmable I/O (programmed by FPU)
10	FNC6	I/O	Programmable I/O (programmed by FPU)
11	FNC7	I/O	Programmable I/O (programmed by FPU)
12	FNC8	I/O	Programmable I/O (programmed by FPU)

CN3

No.	Name	I/O	Function
1	IGN	I	Ignition sens input
2	DATAI	I	External transmit signal input
3	DETO	O	FM detector output
4	TXAFI	I	TX audio input from scrambler board
5	TXAFO	O	TX audio output to scrambler board
6	EMGMIC	I	Emergency MIC input (1kHz/1.2mVrms)
7	RXAFO	O	RX audio output to scrambler board
8	ALTI	I	External alert tone signal input
9	RXAFI	I	RX audio input from scrambler board
10	5C	O	5V DC power supply (50mA MAX)
11	8C	O	8V DC power supply (50mA MAX)

