YAESU VX-6

145/433MHz FM TRANSCEIVER. 500kHz-999MHz AM/FM/WFM RECEIVE 900 MEMORIES - 50 SEARCH BANDS

BASIC OPERATION ON/OFF VOLUME SQUELCH BAND MANUAL TUNING COARSE TUNING STEP SIZE RECEIVE MODE TRANSM IT POWER SETT ING (UN)LOCK VFO/MEM MODE <u>REPEATER OPERATION</u> TONE BURST CTCSS RX/TX Press FV CTCSS SEARCH REVERSE REPEATER	(Press PTT to exit setting menus, and to halt sc an, search etc. See page 2 to enter Set mod e) Press POWER for 1 second Rotate VOL to adjust volume Press FW then MONI. Rotate DIAL to adjust level (59 SQL) Press BAND repeatedly to select desired band (Press FW, then BAND to change direction) Rotate DIAL to adjust frequency Press FW then rotate DIAL to tune in 1MHz steps. Press FW again for normal steps Press FW then 1 Rotate DIAL to adjust step size Press MODE repeatedly to select <i>FM AM W FM</i> or <i>AUTO</i> Press and hold PTT to transm it Press FW then II to transm it Press FW then II to select high or low power Press II for 2 second Press V/M to select VFO or Memory mode With Automatic Repeater Search enabled (Set Mode Item 4), press PTT to transmit on repeater input. Press and release the T.CALL/MONI button (button must be configured for Toneburst – Set mode item 36). V then Mode rotate Dial to select Tone or T SQL. Press FW then 2, then Band for 1 sec to start search. Band Press HW/RV select and again to revert (precede with FW if key is configured for <i>HOME</i> – Set mode 28).		
	node, press and hdd BAND, rotate DIAL to select span. Release BAND. Rotate DIAL to reverse direction.		
MEMORY OPERATION			
MEM WRITE PMS SCAN BAND DEFINE MEMORY RECALL MEMORY OFFSET MEMORY LABELLING MEMORY & PROG SCAN MEMORY BANK SET MEMORY BANK RECALL MEMORY BANK SCAN OTHER FUNCTIONS	In VFO mode, set frequency, mode, (+ tuning step, duplex and tone squelch settings if required). Press F/W for 1 second. Press F/W to store or rotate DIAL to select preferred channel and press F/W to store. Enter data, as above, into L and U (01-50) channels. In Memory mode, rotate DIAL to select desired memory channel. Recall memory as above then press F/W then V/M. Rotate DIAL to tune. Press V/M to revert. In Memory mode, recall the channel to be labelled. In Set mode, item 40, press 0 (set) and rotate DIAL to select 1 st character. Press MODE to move to the next character. When finished, press PTT. In Set mode, item 39, select <i>ALPHA</i> to display label. In Memory mode, recall the channel to be assigned to a memory bank. Press and hold F/W for 1 second, then rotate DIAL to desired bank number. (bx) Press F/W. In memory mode, press BAND. Press F/W. then BAND, then rotate DIAL to desired bank. Press BAND and rotate DIAL to tate DIAL to call through memory bank channels. Select desired memory bank, as above. Press and hold BAND and rotate DIAL to select <i>ALL</i> . Release BAND to initiate scan.		
HOME CH STORE	In VFO mode, set frequency, mode, (+ tuning step, duplex and tone squelch if required). Press F/W for 1 second. Press HM/RV . To recall home channels press HM/RV (precede with FW if key is configured for <i>REV</i> – Set mode 22).		
DUAL WATCH	In Memory mode, press F/W for 1 second. Rotate DIAL to select required channel and press BAND . Press V/M for 1 second to activate and deactivate Dual Watch. Press V/M for 1 second to activate and deactivate Dual Watch.		
SMART SEARCH	In Set mode, item 54 , select <i>SINGLE</i> or <i>CONT</i> inuous sweep. In VFO mode, press and hold MODE and rotate DIAL to display <i>S SRCH</i> . Release MD . Press BAND to initiate search. R otate DIAL to recall stored channels.		
CHANNEL COUNTER	In Set mode, item 12 , select channel counter bandwidth. In VFO mode, set the VX-6 to the predicted frequency range of the target transmitter. Press and hold MODE and rotate DIAL to display <i>CH CNT</i> . Release MODE , to initiate count. Press MODE to exit counter mode.		
M Pro cessor Reset SET M ode Reset	With receiver switched off press MODE, O(SET) and V/M. Press POWER. Press FW. With receiver switched off press MODE and V/M. Press POWER. Press FW		

BAND	MHz	BAND	MHz	BAND	MHz	BAND	MHz
1	0.504-1.800	4	76 - 90	7	137 – 174	A	420 - 470
2	1.800 – 30.000	5	90 – 108	8	174 – 220	b	470 - 770
3	30 – 76	6	108 – 137	9	222 – 420	С	770-998.900

SET MODE

Press FW then O(SET) to enter SET mode Rotate DIAL to select desired parameter Press O(SET) then rotate DIAL to alter parameter Press O(SET) to return to parameter list or press PTT to save and exit

(default shown in bold)

ЕМ, СW,
LD