

### **DB-1217**

# **Duo-Monoband Beam 7 - Element, 12 and 17 Meter**

# INSTRUCTION MANUAL

#### **General Description**

The Hy-Gain DB-1217 is a 7 element, 2 band beam antenna designed for operation on the 12 and 17 meter amateur bands. The DB-1217 uses Hy-Gain's unique Para-Sleeve driven element, monoband reflectors and directors, and Hy-Gain's rugged boom-to-mast bracket. The DB-1217 will mount on a standard 2" O.D. mast and can be rotated with Hy-Gain's CD-4511 or HAM-IV/V rotators. All hardware is stainless steel.

Hy-Gain's Para-Sleeve\* driven element and the monoband parasitics allow 3 element monobander performance on each of the two bands! In addition, the DB-1217 includes assembly dimensions for either 12/17 meters or 10/15 meters! The DB-1217 is designed to survive 115 MPH winds with no ice and 80 MPH winds with 0.25 inch radial ice! This antenna also features a 4 piece boom and a 49" (1.24m) shipping container - ideal for DXpeditions.

	cifications
	lectrical:
Gain (ave.)	5.2 dBd (7.4 dBi)
Front-to Back Ratio (max.)	
Maximum power	1500 watts continuous duty
VSWR at resonance	less than 1.5:1
Input Impedance	50 ohms
Matching system	Beta (DC ground)
Me	echanical:
Boom Length	14 ft. (4.3 m)
Longest Element	29' 6" (9 m)
Turning Radius	
Accepts Mast	1.9 to 2.5 in. (48 to 64 mm)
Net Weight	36 lb. (17 kg)
Shipping Weight	
Maximum Wind Survival	115 mph (185 kph)
Wind Surface Area (max.)	
CONTROL OF THE PROPERTY OF THE	172 lb. (78 kg)
Hardware	All Stainless Steel
Suitable Rotators	Hy-Gain CD-45II, HAM IV or Ham V

<sup>\*</sup>References: U.S. Patent Number 4,604,628. "The Open-Sleeve Antenna", CQ Magazine, Vol. 39, No. 8, August 1983, Pages 13-19. The ARRL Antenna Book, 16th Edition and later, "The Open-Sleeve Antenna", Multiband Antennas Chapter.

#### **Preparation for Assembly**

FOR OUR OVERSEAS CUSTOMERS: The United States uses American units of measurement. Please see page 8 of this manual for American-to-Metric conversion. Most illustrations include both American and Metric dimensions.

When unpacking your antenna, check inside of all tubing for smaller tubes. To conserve space and protect parts, these parts are packed this way. Check all parts against the parts list to ensure none are missing.

Choose a large, clear area to assemble your 1313-1217 antenna. The area must be at least 14' x 30' (4.3 m x 9 m). You may wish to use a temporary mast to support the boom during assembly.

All tubing supplied with the D13- 1217 telescopes together. Make all measurements to the given dimensions, plus or minus no more than 1/8 inch (3 mm).

TOOLS: The following tools are required for easy assembly of the DB-1217:

Type Tool	Qty
Tape Measure, 12 foot	1
Nut Driver, 5/16" (8mm)	1
Nut Driver, 3/8" (9.5mm)	1
Nut Driver, 7/16" (11mm).	1
Nut Driver, 1/2" (12.7 mm)	)


#### Assembly of the Boom

Select the boom-to-mast clamps (Items 5 and 6). Loosely assemble them on the drilled ends of the two boom sections (Item 8) using the 1/4"-20 x 3/4" bolts, 1/4" nuts and lockwashers (Items 41, 44 and 45). Secure the boom to the bracket using the two 5/16"-18 x 2 3/4" screws, nuts and lockwashers (Items 37, 38 and 39). Tighten these six bolts securely.

Assemble the two cast aluminum brackets (Item 1) on your temporary mast about 4 feet (1 m) above ground. Secure the two brackets together using the two 5/16"-18 x 3" bolts, nuts and lockwashers. Tighten these two bolts evenly until the brackets are snug.

Attach the boom assembly to these two brackets using the four 5/16"-18 x  $_5$ " bolts, nuts and lockwashers (Items 35, 38 and 39). Tighten these four bolts just enough to hold the weight of the antenna.

Assemble the remaining two boom sections (Item 7) to the ends of the assembled boom using 1/4"-20 x 2 1/2" screws, nuts, and lockwashers. Tighten securely.

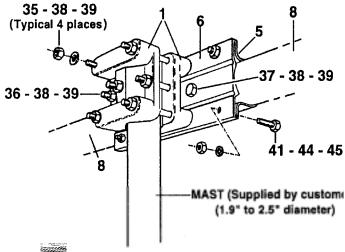

No.	Description
1	Mast Bracket, cast aluminum
5	Clamp, Boom-to-bracket
6	Bracket, Casting-to-boom
8	Boom, 2" x 46 1/2" swaged
35	Bolt, 5/16"-18 x 5", hex head, stainless steel
36	Bolt, 5/16"-18 x 3", hex head, stainless steel
37	Bolt, 5/16"-18 x 2 3/4", hex head, stainless steel
38	Nut, 5/16"-18, hex, stainless steel
39	Lockwasher, 5/16", split, stainless steel
41	Bolt, 1/4"-20 x 3/4", hex head, stainless steel
44	Nut, 1/4"-20, hex, stainless steel
45	Lockwasher, 1/4" internal

Figure 1 Boom-to-Mast

#### **Element-to-Boom Brackets**

There are three sizes of element-to-boom brackets supplied. The largest (Item 4) has a 1 1/2" I.D., and is used only on the 17m driven element. The medium-sized brackets (Item 3) have a 1 1/4" I.D., and are used on the 17m reflector and director elements. The smallest brackets (Item 11) have a 7/8" I.D., and are used on the all of the 12m elements.

Assemble the brackets as shown in Figure 2 and position them on the boom as shown in Figure 8. It is easier to assemble the brackets on the boom at the correct location, rather than try to slide them on the boom. If you are going to leave this assembly unattended for more than 15 minutes, we suggest that you tighten the eight (8) bolts on each bracket, so that they do not vibrate off. Do not tighten the two (2) anchor bolts (Item 40) until the elements are installed and aligned.


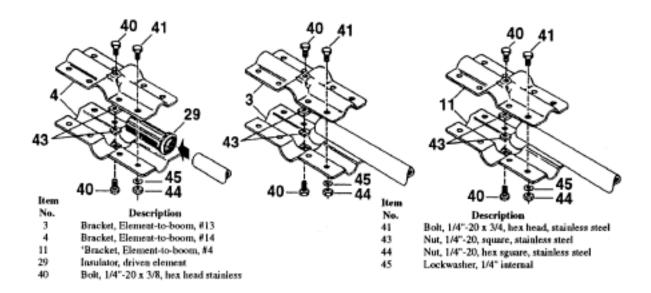


Figure 2 Element-to-Boom Bracket

#### **Tubing Clamp**

Select the proper size tubing clamps as shown in Figure 3. When installing the clamps, place the clamp near the tube end with the top of the clamp over the slot in the tube as shown. After adjustment of the tubing lengths, tighten the clamp with a 5/16 inch (8 mm) nut driver until the tubing will not twist or telescope. DO NOT overtighten!

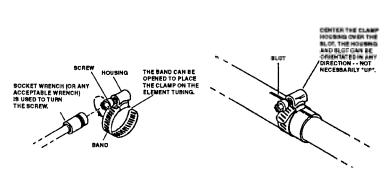

Part No.	Description	Tubing Sizes
358756	Clamp, Size #6 all stainless steel 5/16" hex head screw	1/2" - 7/8"
Part No.	Description	Fits Tubing Sizes
358757	Clamp, Size #10 all stainless steel 5/16" hex head screw	1 1/8"
Part No.	Description	Fits Tubing Sizes
358758	Clamp, Size #16 all stainless steel 5/16* hex head screw	1 1/4"
	No. 358756 Part No. 358757 Part No.	No.  358756  Clamp, Size #6 all stainless steel 5/16" hex head screw  Part No.  Clamp, Size #10 all stainless steel 5/16" hex head screw  Part No.  Description  Description  Clamp, Size #16 all stainless steel

December 1


Ette.

Figure 3 Tubing Clamp Assembly

#### **Settings**

The DB-1217 is supplied with 3 settings - 12/17, 10/15 - CW and 10/15 - Phone. Choose one of these settings to use in assembling this antenna. Typical VSWR curves shown in Figure 4 will help you decide which setting to use.

The VSWR curves are typical for this antenna mounted 70 feet (21.3 m) above ground. Similar curves can be expected for this antenna mounted between 30 feet (9.1 m) and 100 feet (30.5 m) above ground. Do not try to tune this antenna for low VSWR at ground level!

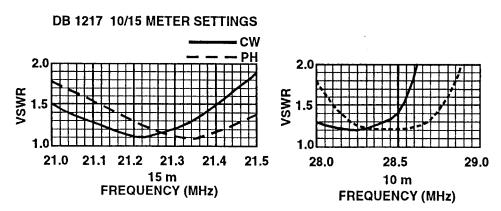

NOTE: 12 and 17 meter settings are not shown as the VSWR is less than 1.5 over each entire band.

Figure 4 VSWR Curves

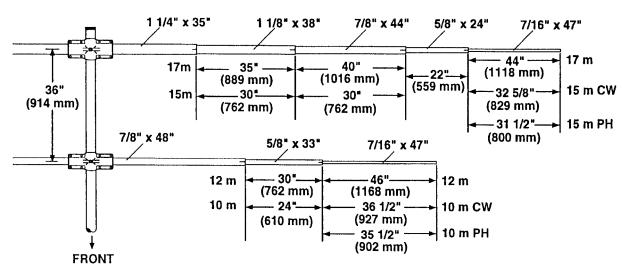


Figure 5 Reflector Assemblies

#### **Element Assembly**

Select the remaining tubing parts and tubing clamps. Assemble each element as shown in Figures 5, 6, and 7. Mark each element with an indelible marker. Use "17R" for the 17m reflector sections, "17DE" for the 17m driven element sections, and "17DIR" for the 17m director sections.

Mark the 12m sections in the same manner. Install the driven element insulators (Item 29) and the 1 1/4" tubing clamp assemblies onto the large ends of the 17m driven element sections. See Figure 3 for clamp assembly details.

Penetrox-A® is supplied for use as an antioxidant within the element tubing assemblies

Penetrox® is a registered trademark of \$urndy Corporation

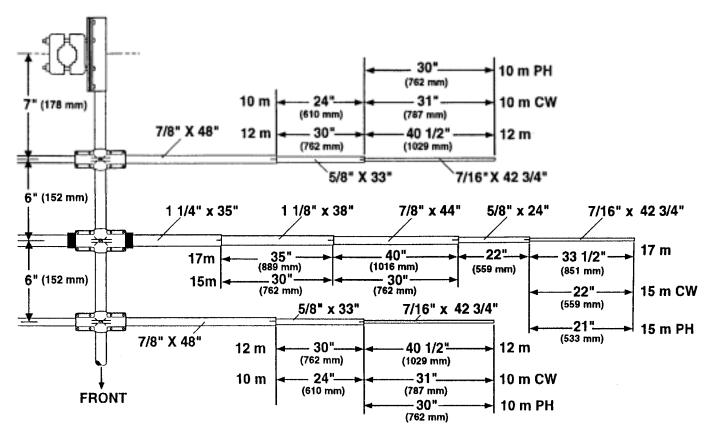


Figure 6
Driven Element Assemblies

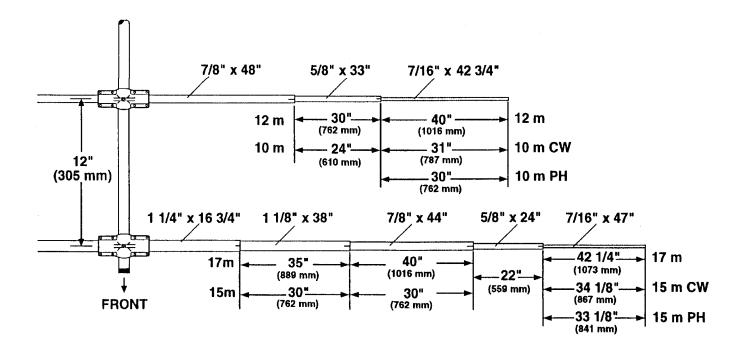


Figure 7 Director Assemblies

Select each completed element assembly and install each into the appropriate element-to-boom bracket. Refer to the Overall View in Figure 8. Tighten the eight (8) 1/4"-20 x 3/4" bolts on each bracket until it is difficult to rotate the bracket on the boom. Make sure the anchor bolts in the center of each bracket are still loose at this point.

Recheck the spacings between the elements and adjust if necessary. Align all elements so that they are parallel to the ground and at a right angle to the temporary mast. When all elements are aligned, securely tighten the eight bolts and two anchor bolts on each element.

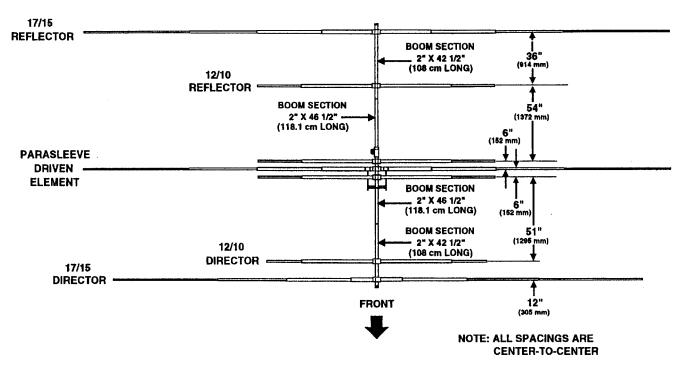


Figure 8 DB-1217 Overall View

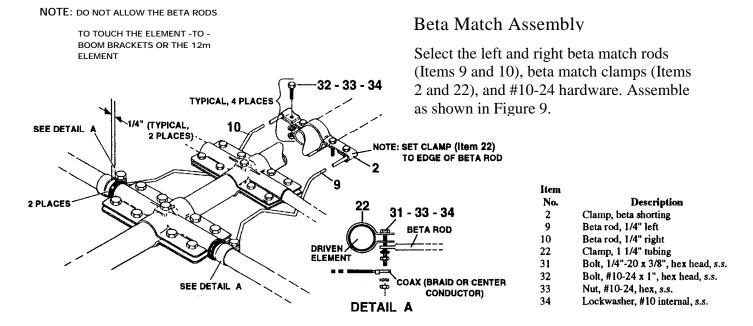


Figure 9 Beta Match Assembly

#### NOTE: COVER COAX DIELECTRIC WITH BLACK TAPE OR HEAT SHRINK TUBING

TO PREVENT CRACKING FROM U.V. EXPOSURE.

 


Figure 10 Coax Stripping

#### Balun Choices

The D13- 1217 does not include a balun, however it is recommended that a balun or coaxial RF choke be used at the feedpoint. A voltage-balun such as the Hy-Gain BN-86 may be used if antenna tuners and high-power amplifiers will not be used together with this antenna.

A current-type balun such as the Hy-Gain BN-4000 is highly recommended, especially if this antenna will be used off-resonance with antenna tuners and high-power amplifiers. Another alternative is to use a home-made RF choke. This works identical to the current-type balun.

The RF choke may be wound from 12 turns of RG-213/U on a 6 inch diameter form. One end should be stripped as shown in Figure 10. The RF choke MUST be mounted at the driven element.

#### Installation

Double-check all dimensions and tighten all connections before installation.

#### WARNING!

Installation of this antenna near power lines is dangerous! For your safety, follow the instructions provided with your tower and the instructions in this manual. NEVER 'install" this antenna

The cast aluminum boom-to-mast brackets must be removed from the temporary mast and installed on the permanent mast as shown in Figure 1. Attach a gin pole to the tower or mast to assist in lifting the antenna. There must be at least two (2) people available when installing this antenna. DO NOT try to install this antenna by yourself!

Attach the lifting rope to the balance point of the antenna. The lifting rope should be fed through the gin pole or other pulley arrangement attached to the tower. The other end should be at ground level, available to the ground crew for lifting.

When the antenna reaches the mast bracket, pin the antenna to the cast brackets with a single 5" bolt. This takes the weight of the antenna off the lifting rope and allows the person at the top of the tower to tilt the antenna up, so that the other three 5" bolts may be installed. Tighten all four of the 5/16"-18 x 5" bolts (Item 35) securely. Check the direction of the antenna for use in calibrating your rotator and reposition if necessary. Tape the coaxial cable to the mast, leaving a loop for rotation. This completes your installation of the DB- 1217.

#### Service

If you are encounter techical problem and need assistance, you should contact Hy-Gain Customer Service Department.

Hy-Gain

308 Industrial Park Road Starkville, Mississippi 39759 USA

Phone: 662-323-9538

## Parts List

Item	Part No.	Description Qty	
No.	102734	Mast Bracket, cast aluminum	2.
1			
2	163371	Clamp, beta shorting	
3	165919	Bracket, Element-to-boom, #13	
4	165920	Bracket, Element-to-boom, #14	
5	172732	Clamp, Boom-to-bracket	
6	172735	Bracket, Casting-to-boom	
7	179892	Tube, 2" x.049 x 42 1/2", drilled	
8	179893	Tube, 2" x.049 x 46 1/2", swaged	
9	170067	Beta rod, 1/4" left	
10	170068	Beta rod, 1/4" right	
11	163764	Bracket, Element-to-boom, #4	
12	190307	Tube, aluminum, 1 1/8" x 38"	
13	172922	Tube, aluminum, 7/16" x 47"	
14	175512	Tube, aluminum, 7/16" x 42 3/4"	8
15	190004	Tube, aluminum, 5/8" x 24"	6
16	190015	Tube, aluminum, 5/8" x 33	8
17	190205	Tube, aluminum, 7/8" x 44"	6
18	190906	Tube, aluminum, 1 1/4 x 16 3/4"	2
19	191025	Tube, aluminum, 7/8" x 48	8
20	878579	Tube Assembly, Driven Element, 1 1/4" x 35"	4
21	873725	Parts Pack Clamps DB 1217	1
22	171777	Clamp, 1 1/4", tubing	2
23	358756	Clamp, #6 tubing	28
24	358757	Clamp, #10 tubing	
25	358758	Clamp, #16 tubing.	
26	878726	Parts Pack Insulator	1
27	455625	Caplug, 2	2
28	455644	Caplug, 7/16"	14
29	465833	Insulator, driven element	
30	878727	Parts Pack Hardware DB 1217	1
31	500159	Bolt, #10-24 x 1 1/2", hex head, stainless steel	2
32	504069	Bolt, #10-24 x 1, hex head, stainless steel	
33	554071	Nut, #10-24 hex, stainless steel	8
34	565697	Lockwasher, internal, #10, stainless steel	
35	500349	Bolt, 5/16"-18 x 5", hex head, stainless steel	
36	500392	Bolt, 5/16"-18 x 3", hex head, stainless steel	
37	506968	Bolt, 5/16-18 x 2 3/4", hex head, stainless steel	
38	555747	Nut, 5/16"-18, hex, stainless steel	
39	564792	Lockwasher, 5/16", split, stainless steel	
40	500156	Bolt, 1/4"-20 x 3/8", hex head, stainless steel	
41	505266	Bolt, 1/4"-20 x 3/4", hex head, stainless steel	
42	505734	Bolt, 1/4"-20 x 2 1/2", hex head, stainless steel	
43	551367	Nut, 1/4"-20, square, stainless steel	
44	554099	Nut, 1/4"-20, hex, stainless steel	
45	562961	Lockwasher, 1/4" internal	
46	878697	Penatrox-A®, 1 oz.	