

**INSTRUCTION  
MANUAL  
FTV-901R**

**YAESU MUSEN CO , LTD.**

TOKYO JAPAN.

# FTV-901R

## VHF/UHF TRANSVERTER



### GENERAL

The FTV-901R is an all-new transverter for the FT-901DM and FT-101ZD series, capable of operation on the 50, 144, and 430 MHz bands. The basic unit comes equipped with 144 MHz capability, and the 50 and 430 MHz band modules may be added as options. Power input is 20 watts on all three bands.

For satellite operators, three satellite bands are provided, allowing full duplex operation through the transverter, using an external receiver in addition to the FT-901DM. The operator can transmit on 145 MHz while listening on 29 MHz or 435 MHz, or transmit on 435 MHz while listening on 145 MHz.

The FTV-901R also includes repeater split for 50 and 144 MHz, allowing full use of the FM capability of the FT-901DM. Fully solid state, the FTV-901R includes protection for the final amplifier transistors against damage caused by high SWR. Spurious radiation is at least 60 dB down.

The owner is urged to read this manual in its entirety, so as to become better acquainted with the exciting new FTV-901R. With proper care in operation, this equipment should provide many years of trouble-free operation.

## SPECIFICATIONS

**Frequency range:**

50–54 MHz (option)  
 144–148 MHz  
 430–440 MHz (option)

**Mode:**

SSB, CW, AM, FM

**Input impedance:**

50–75 ohms

**IF output frequency:**

28–30 MHz

**RF power output:**

10 watts @ 50% duty cycle

**Drive requirements:**

3 V RMS at 28–30 MHz

**Receiver spurious responses:**

Image rejection better than 50 dB.  
 Internal spurious signals below 1  $\mu$ V equivalent  
 to antenna input.

**Size:**

210(W) x 157(H) x 352(D) mm

**Weight:**

10 kg

### SEMICONDUCTOR COMPLEMENT

**FET:**

3SK51-03	6	3SK59Y	1
----------	---	--------	---

**Schottky Barrier Diodes:**

1SS43	4
-------	---

**Silicon Transistors:**

2SC730	2	2SC2053	2
2SC784R	6	2SC2166	1
2SC1424	5	2SC2369	2
2SC1426	2	2SC235D	1
2SC1815Y	11	MJE3055	1
2SC1945D	1		

**Zener Diode:**

WZ110	1
-------	---

**Varactor Diodes:**

1S2209	12
--------	----

**Power Modules:**

VP20BL	1	VP07BL	1
--------	---	--------	---

**Integrated Circuits:**

MC1496G	2	$\mu$ PC14308	1
78L08	3	TA7089M	1

**Light Emitting Diodes:**

GD4-203SRD	9
------------	---

**Germanium Diodes:**




1S188FM	6
---------	---

**Silicon Diodes:**

1S1555	46	10D1	13
MC301	2	S4VB	1
1SS53	22		

**ACCESSORIES:**


- Cable A      1 pc.      RCA plug      1 pc.
- Cable B      1 pc.      Spare fuse      1 pc.
- Cable C      1 pc.

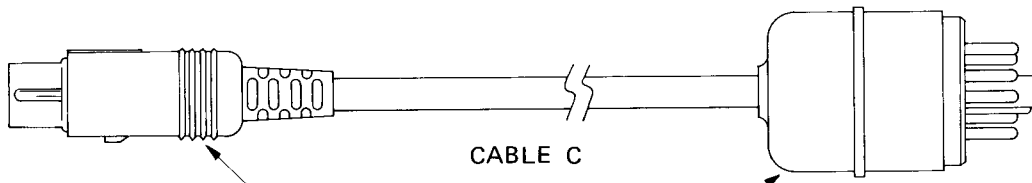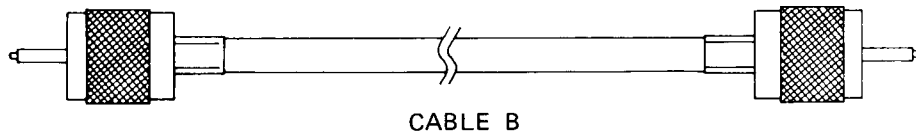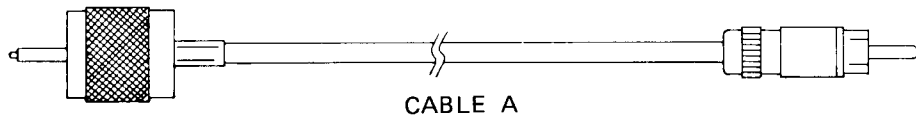

PIN No.		COLOR	PIN No.
1	HEATER1	WHITE	1
2	HEATER2	BLUE	2
3	No. C		
4	HEATER1'		1
5	HEATER2'		2
6	TX;GND	WHITE/RED	9
7	RX;GND	WHITE/GREEN	10
GROUND SHELL	EARTH	BLACK	8

Cable C Connections

## FRONT PANEL CONTROLS AND SWITCHES

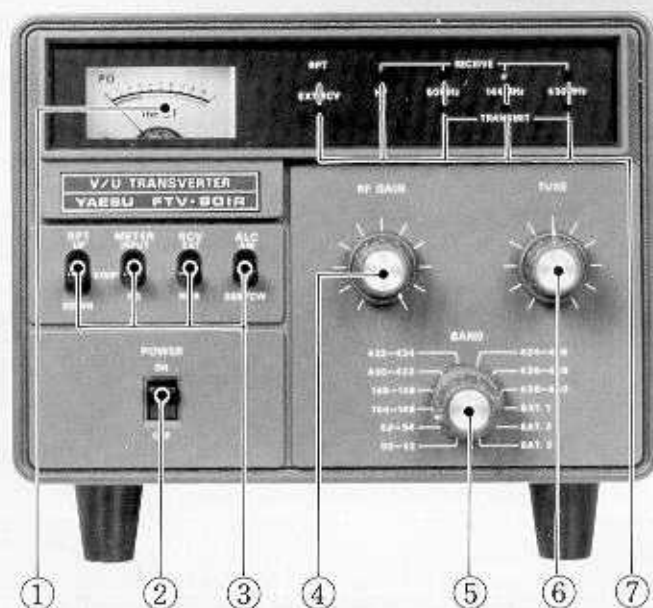

### (1) METER

Depending on the position of the METER switch, the meter displays the drive level or the relative output level of the transmitter.

### (2) POWER

This is the main ON/OFF switch for the transverter.

### (3) FUNCTION SWITCHES

#### SHIFT (UP/SIMP/DOWN)

For 144 MHz, this switch selects  $\pm 600$  kHz repeater shift, or simplex operation. When the optional 50 MHz unit is installed, this switch selects  $\pm 1$  MHz split, or simplex operation.

#### METER

When set to the input position, the METER selects indication of the input level for meter display. In the PO position, relative power output is displayed.

#### RCV

In the NOR position, both transmit and receive functions are accomplished by the FT-901DM or other transceiver. When set to the EXT position, reception is accomplished on an external receiver. This is normally used only for satellite operation.

#### ALC

This switch selects the ALC threshold level. For FM operation, use the SSB/CW position.

### (4) RF GAIN

This control sets the receiver RF gain level for 50 and 144 MHz operation. This control is not used for 430 MHz.

### (5) BAND

For 50 and 144 MHz, two bandswitch positions are used. For 430 MHz, 5 bandswitch positions are assigned. Each bandswitch position tracks 500 kHz, the tuning range of the FT-901DM.

The SAT. 1 position is for OSCAR Mode A: 144 MHz transmit, 28 MHz receive. The SAT. 2 position is for OSCAR Mode B: 430 MHz transmit, 144 MHz receive. The SAT. 3 position is for OSCAR Mode J: 144 MHz transmit, 430 MHz receive.


### (6) TUNE

This control peaks the transmitter section of the transverter, on the 50 and 144 MHz bands. This control is not used for 430 MHz.

### (7) INDICATOR LEDs

These light emitting diodes indicate which band is being used for transmit and receive, and also indicate repeater and external receiver operation.

## REAR PANEL

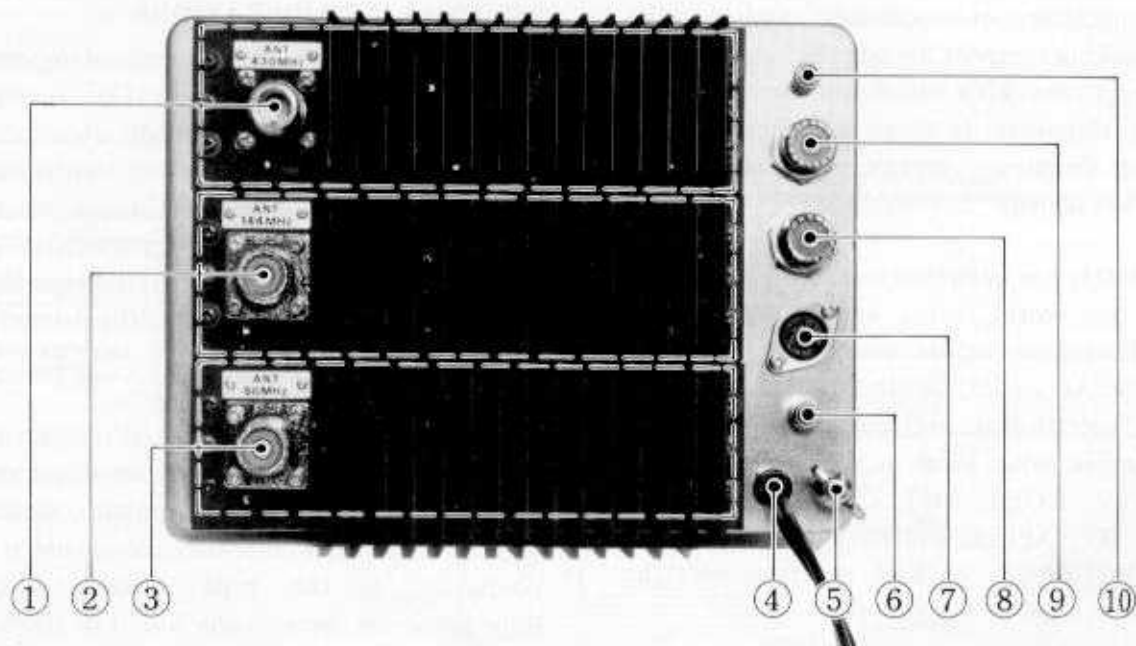

### (1) 430 MHz UNIT and ANTENNA JACK

When the optional 430 MHz unit is installed, the 430 MHz antenna should be connected here. An N-type connector is utilized, for improved UHF performance.

### (2) 144 MHz UNIT and ANTENNA JACK

The 144 MHz unit is built in, and the 2 meter antenna should be installed here.

### (3) 50 MHz UNIT and ANTENNA JACK

When the optional 50 MHz unit is installed, the 50 MHz antenna should be connected to this jack.

### (4) POWER cord

This is the connection to the AC power line.

### (5) GND

For best performance, and protection from dangerous electrical shock, a good earth ground should be connected here, using a short, heavy, braided cable.

### (6) RF IN

This jack should be connected to the FT-901DM RF OUT jack, using the supplied Cable A. Do NOT connect this jack to the FT-901DM ANT jack.

### (7) ACC

This jack should be connected to the FT-901DM ACC jack, using the supplied Cable C.

### (8) HF ANT

The HF antenna should be connected to this jack.

### (9) OUTPUT

This jack should be connected to the FT-901DM ANT jack, using the supplied cable B.

### (10) EXT RCV

When an external receiver is used, its antenna jack should be connected to this terminal. The connection will be made when the FUNCTION switch is set to EXT RCV. (Connection cable not supplied)

## INSTALLATION

Open the packing carton carefully, and save the box and packing material for possible use at a later date. Inspect the FTV-901R for any signs of damage in shipment. If there is visible damage, contact the shipping company immediately, and document the damage thoroughly.

The FTV-901R has been designed for use in many areas of the world, using various AC supply voltages. Therefore, before connecting the FTV-901R to the AC outlet, be absolutely certain that the power specification on the rear of the transverter matches your local supply voltage. **OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY APPLICATION OF IMPROPER SUPPLY VOLTAGE.** As well, never connect the power cord to a DC power source.

The transverter may be situated in any position without loss of performance. The only constraints regarding installation involve air circulation: the transverter should be located where there is free passage of air around the cabinet and heat sinks.


The transverter should be connected to a good earth ground.



Please refer to the drawings for details of correct interconnections between the FTV-901R and the FT-901DM/FT-101ZD and an external receiver, such as the FR-101D.

## ANTENNA CONSIDERATIONS

The antenna installation is of critical importance in VHF and UHF installations. For satellite and moonbounce applications, height above ground is not as critical as is the case with local FM installations. A minimum distance of 10 feet should be maintained between the VHF and HF antennas. In all installations, the antenna should be clear of surrounding objects, if the desired pattern is to be obtained.

Do not economize on coaxial cable, as some "bargain" cables have very poor shield coverage, and this may degrade performance significantly. For the 430 MHz antenna, please use a type N connector, as this type provides a constant impedance on the antenna line. For short coaxial runs, we recommend type RG8A/U coax. For very long runs, type RG-17A/U, aluminum-jacketed "foamflex" coax, or air-dielectric "heliac" cables may be used, owing to their very low losses. The SWR on the feedline should be kept below 2 : 1 at all times, to minimize feedline losses.

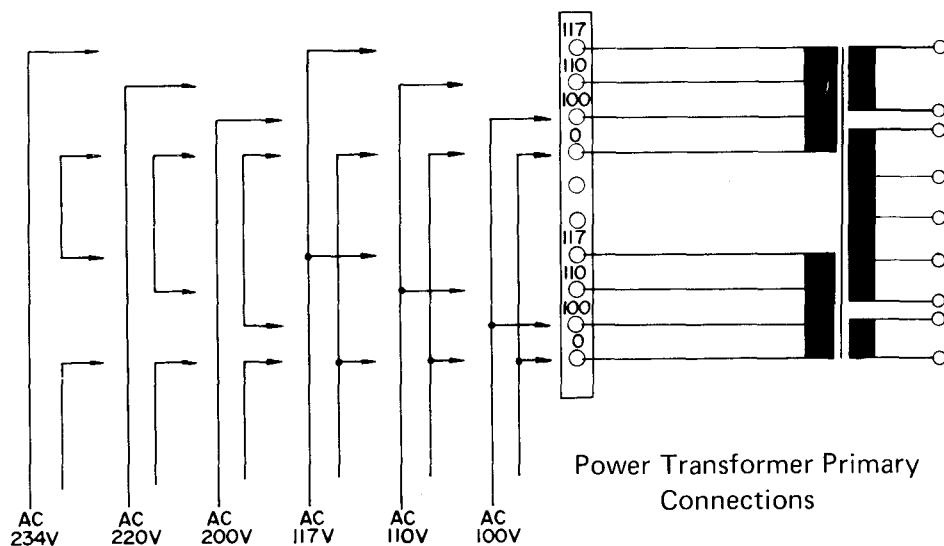

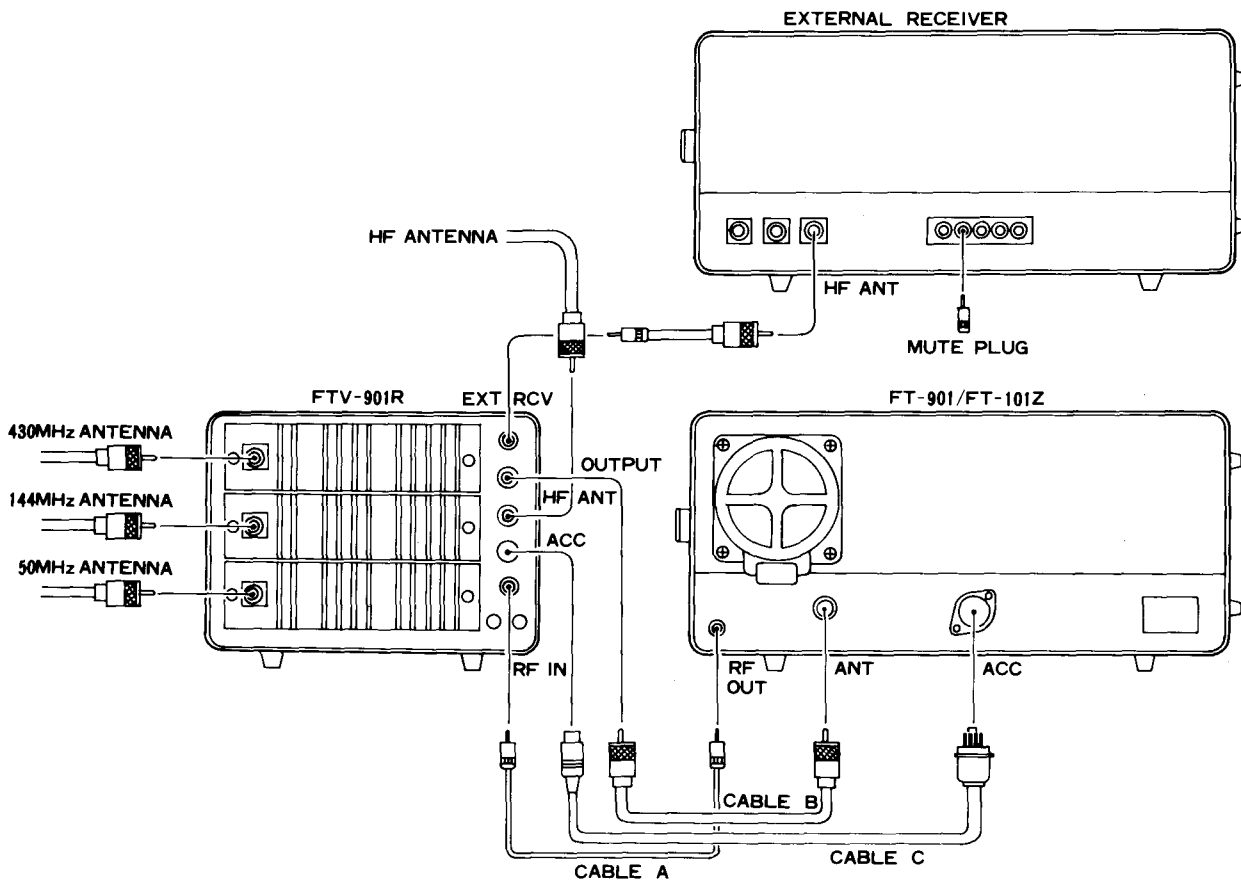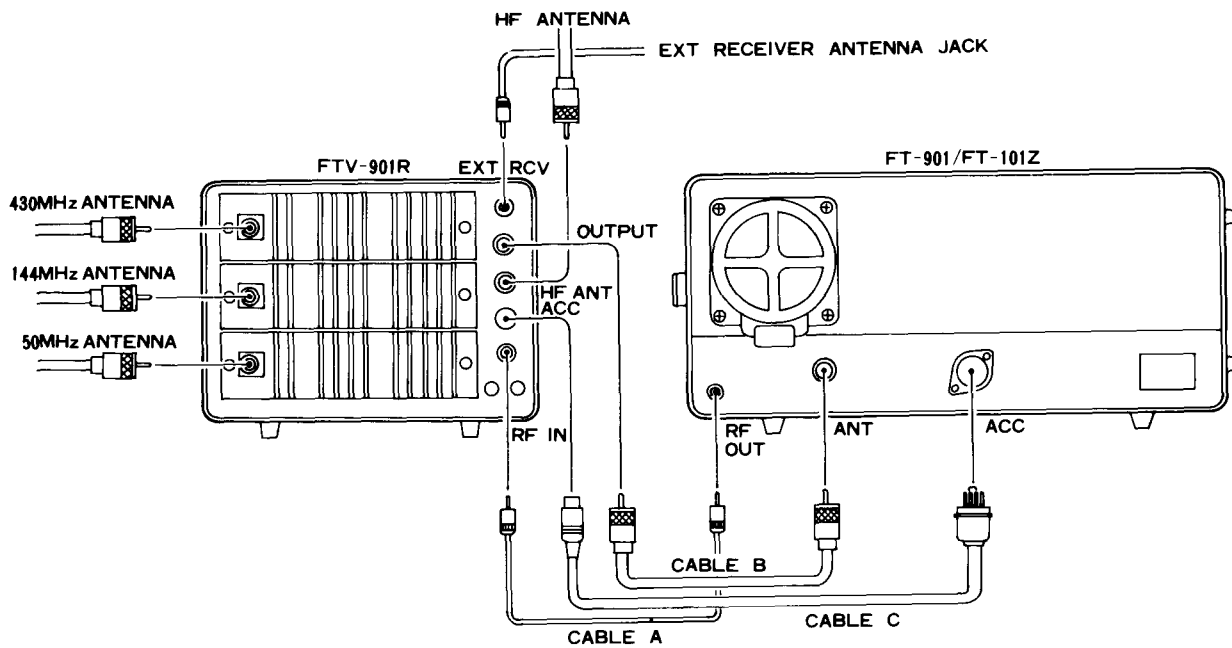



## OPERATION

The tuning procedure for the FTV-901R transverter is not complicated. However, care should be exercised in tuning so as not to exceed the ratings of the transverter and HF transceiver. It is assumed that the proper interconnections have been performed, as described on page 7.

The following discussion is tailored to a fully-equipped FTV-901R, including the 50 and 430 MHz units. The reader should note that these are optional units on the standard FTV-901R. The word "option" will hereafter be omitted in the interest of brevity.

### INITIAL CHECK


Before connecting the FTV-901R to the power source, confirm that the AC power specification is correct for the supply voltage used, and that a fuse of the proper rating is installed. Check all switches for normal operation. Recheck the interconnections between the HF equipment and the transverter.

### FREQUENCY SELECTION

The operating frequency is determined by the position of the main tuning dial and bandswitch of the HF transceiver, as well as the position of the transverter band switch. Please refer to the frequency chart below.

**FREQUENCY COVERAGE CHART**

		HF TRANSCEIVER BANDSWITCH				
		10A	10B	10C	10D	
FTV-901R BANDSWITCH	50-52	50.0-50.5	50.5-51.0	51.0-51.5	51.5-52.0	
	52-54	52.0-52.5	52.5-53.0	53.0-53.5	53.5-54.0	
	144-146	144.0-144.5	144.5-145.0	145.0-145.5	145.5-146.0	
	146-148	146.0-146.5	146.5-147.0	147.0-147.5	147.5-148.0	
	430-432	430.0-430.5	430.5-431.0	431.0-431.5	431.5-432.0	
	432-434	432.0-432.5	432.5-433.0	433.0-433.5	433.5-434.0	
	434-436	434.0-434.5	434.5-435.0	435.0-435.5	435.5-436.0	
	436-438	436.0-436.5	436.5-437.0	437.0-437.5	437.5-438.0	
	438-440	438.0-438.5	438.5-439.0	439.0-439.5	439.5-440.0	
	SAT. 1	TX	144.0-144.5	144.5-145.0	145.0-145.5	145.5-146.0
RX				29.0-29.5		USB
SAT. 2	TX	432.0-432.5	432.5-433.0	433.0-433.5	433.5-434.0	USB
	RX	144.0-144.5	144.5-145.0	145.0-145.5	145.5-146.0	LSB
SAT. 3	TX	144.0-144.5	144.5-145.0	145.0-145.5	145.5-146.0	USB
	RX	434.0-434.5	434.5-435.0	435.0-435.5	435.5-436.0	LSB

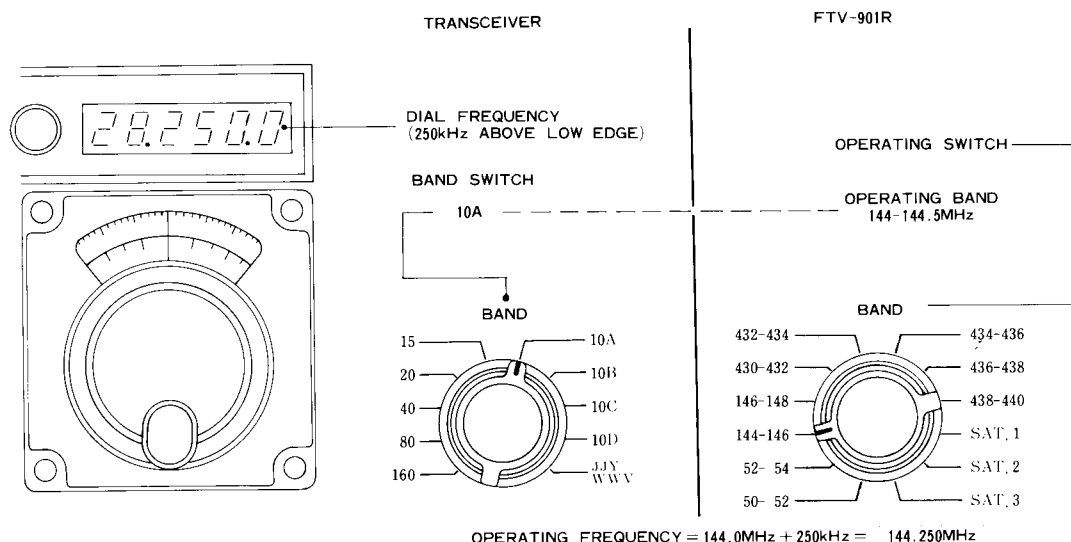

For example, with the FT-901DM bandswitch set to 10A, and the FTV-901R bandswitch set to 144–146, operation will take place on 144.0–144.5 MHz. By setting the FT-901DM main tuning dial to 28.250.0, operation will take place on 144.250 MHz. See the section on satellite operation for frequency determination on the SAT. bands.

#### NORMAL TUNE UP

- (1) Set the FTV-901R RPT switch to NOR, the METER switch to INPUT, the RCV switch to NOR, the ALC switch to SSB/CW, and the BAND switch to the desired band. The POWER switch should be OFF.
- (2) With the transverter off, peak the preselector on the FT-901DM against the marker signal. Be certain that the FT-901DM HEATER switch is ON.
- (3) Set the FTV-901R POWER switch to ON.
- (4) For 50 or 144 MHz tuning, set the FT-901DM CARR control fully counterclockwise. Push the TUNE button, and slowly advance the CARR control until the FTV-901R meter enters the green zone. Now switch the FTV-901R METER switch to PO, and rotate the TUNE control for a maximum meter reading.
- (5) For 430 MHz, there is no peaking procedure for the transverter. With the FT-901DM preselector peaked, the only adjustment that must be made is to set the drive level correctly.
- (6) For FM and CW operation, set the ALC switch to SSB/CW. The transceiver CARRIER control may be advanced to the point where the PO does not increase further.
- (7) For SSB operation, set the FT-901DM MIC GAIN level so that the FTV-901R INPUT level on the meter does not go past the green zone on the meter scale on voice peaks.
- (8) For AM operation, set the ALC switch to AM, and set the METER switch to PO. Advance the transceiver CARRIER control until the meter indicates .3 on the scale. Advance the transceiver MIC GAIN control until the PO meter just begins to move on voice peaks.
- (9) Advancement of any of the drive levels beyond the point stipulated in steps (6) through (8) will not increase the power output; component life may, however, be

shortened drastically if these input levels are exceeded.

- (10) For 6 and 2 meters, rotation of the FTV-901R RF GAIN control will provide adjustment of the gain of the receive converter section. For 430 MHz, this control has no effect, as the converter is always set for maximum gain.

#### REPEATER OPERATION

When using the FT-901DM transceiver, FM operation on repeaters on 6 and 2 meters is provided. For repeater split, set the RPT switch to the DOWN position for shift of  $-1$  MHz on 6 meters, or  $-600$  kHz for 2 meters. For a shift of  $+1$  MHz or  $+600$  kHz, set the RPT switch to UP.

#### SATELLITE OPERATION

Operation on the amateur satellites is possible, using an external receiver in addition to the FT-901DM transceiver. The FT-901DM transceiver. The FT-901DM provides the transmit signal, while the external receiver monitors the downlink, on full duplex.

For OSCAR Mode A, transmission takes place on 145.850–145.950 MHz, with reception on 29.400–29.500 MHz. Set the FTV-901R band switch to the SAT. 1 position. Set the FT-901DM band switch to 10D, and tune to 29.850–29.950 MHz. Set the external receiver for reception on 29.400–29.500 MHz.

For OSCAR Mode B, the uplink is 432.125–43.175 MHz, and the downlink is 145.975–145.925 MHz. Set the FTV-901R band switch to the SAT. 2 position. Set the FT-901DM band switch to 10A, and tune to 28.125–28.175 MHz. Set the external receiver for reception on 29.925 MHz. The OSCAR 7 Mode B transponder inverts signals, so an upper sideband signal on the uplink becomes a lower sideband signal on the downlink. Set the mode switches on the FT-901DM and the external receiver appropriately.

For OSCAR Mode J, the uplink is 145.900–146.000 MHz, while the downlink is 435.100–435.200 MHz. Set the FTV-901R band switch to the SAT. 3 position. Set the FT-901DM band switch, to 10D and tune to 29.900–29.999 MHz.

Set the external receiver for reception on 29.6–29.7 MHz. The OSCAR 8 Mode J transponder also inverts signals.

Please note that, because of Doppler effect and other reasons, the frequency translation may not be precisely linear, as might be inferred from the above discussion. Some precise zeroing using the external receiver may be necessary.

**Note:** When using the FTV-901R on OSCAR Mode J, along with an FT-101 or FR-101 external receiver, a fairly loud spurious signal may be noted at 29.150 MHz on the external receiver (29.150 MHz receive). This is because the fourth harmonic of the local oscillator (35.02 MHz for band 10C), plus the VFO frequency (5.87 MHz), is precisely the transmitting frequency required (145.950 MHz). We recommend that the local crystal frequency be changed to 35.12 MHz.

We regret this inconvenience to you, but the FT-101 and FR-101 series was produced long before OSCAR 8 was conceived. There should be no problem at all when using the FT-901 series or FT-101ZD, etc.


## AUXILIARY REPEATER SPLIT INSTALLATION

Should your locality use a repeater split of other than 1 MHz or 600 kHz for six and two meters, respectively, the correct split can be installed by obtaining an optional crystal (see your Yaesu dealer).

Connect a frequency counter to the cathode of D<sub>212</sub> (6 meters) or D<sub>607</sub> (2 meters). Adjust the trimmer capacitors shown in the chart below for the correct frequency.

## INSTALLATION OF OPTIONAL MODULES

1. Remove the top and/or bottom cover of the transverter, to allow precise insertion of the unit to be installed.
2. Carefully slide the module into the correct position. Do not force the connection.
3. Replace the cabinet covers. Installation is now complete. The module has been carefully aligned at the factory.

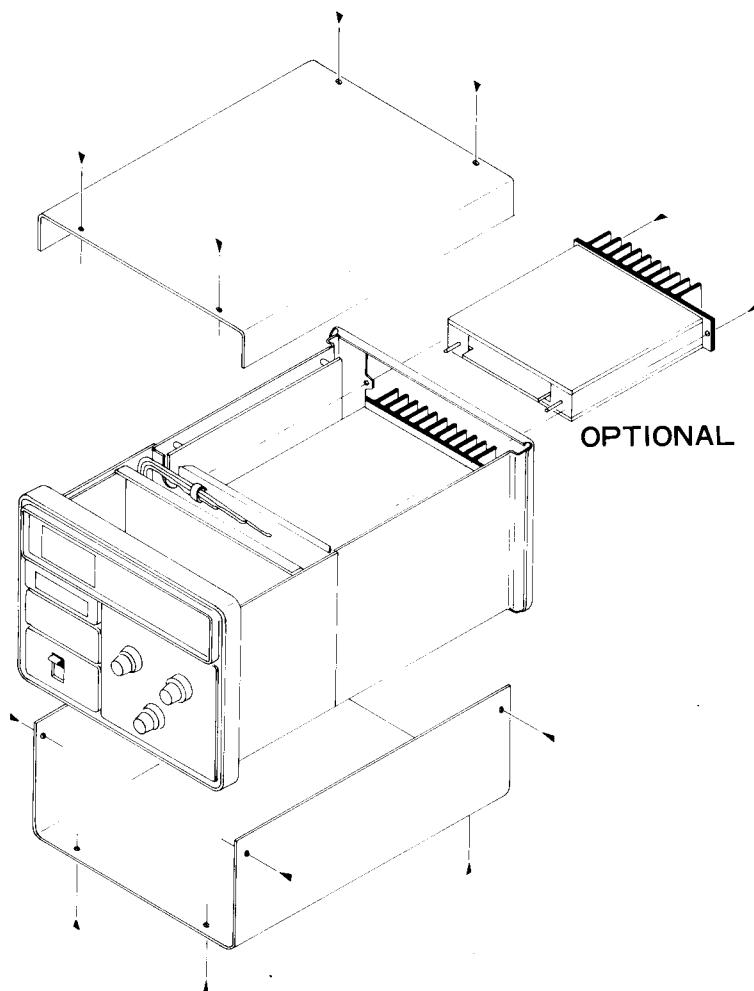

### CRYSTAL DATA FTV-901R

FUNCTION		HOLDER	RANGE (MHz)	MODE	LOAD C	EFFECTIVE RESISTANCE	DRIVE LEVEL
50 MHz	X <sub>201</sub>	HC-18/U	22.0	Fundamental	19 pF	15 Ω	2 mW
	X <sub>202</sub>	"	24.0	"	"	"	"
	X <sub>203</sub>	HC-25/U	23.0	"	"	"	"
	X <sub>205</sub>	"	21.0	"	"	"	"
144 MHz	X <sub>601</sub>	HC-18/U	38.666··	3rd overtone	15 pF	25 Ω	"
	X <sub>602</sub>	"	39.333··	"	"	"	"
	X <sub>603</sub>	HC-25/U	38.866··	"	"	"	"
	X <sub>604</sub>	"	39.533··	"	"	"	"
	X <sub>605</sub>	"	38.466··	"	"	"	"
	X <sub>606</sub>	"	39.133··	"	"	"	"
430 MHz	X <sub>1601</sub>	HC-18/U	67.000	"	23.5 pF	40 Ω	0.5 mW
	X <sub>1602</sub>	"	67.333··	"	"	"	"
	X <sub>1603</sub>	"	67.666··	"	"	"	"
	X <sub>1604</sub>	"	68.000	"	"	"	"
	X <sub>1605</sub>	"	68.333··	"	"	"	"

BAND	50MHz		144MHz	
RANGE	50-52	52-54	144-146	146-148
LOCAL FREQUENCY	22MHz(×1)	24MHz(×1)	116MHz(×3)	118MHz(×3)
OSC. FREQUENCY	22MHz ☆	24MHz ☆	38.666··MHz ▲	39.333··MHz ▲


☆ FUNDAMENTAL


▲ THIRD OVERTONE

BAND	430MHz				
RANGE	430-432	432-434	434-436	436-438	438-440
LOCAL FREQUENCY	402MHz (×3×2)	404MHz (×3×2)	406MHz (×3×2)	408MHz (×3×2)	410MHz (×3×2)
OSC. FREQUENCY	67.000 MHz ▲	67.333··MHz ▲	67.666··MHz ▲	68.000 MHz ▲	68.333··MHz ▲

## CIRCUIT DESCRIPTION

The circuit description to follow should help you understand the operation of the FTV-901R transverter. Follow the block diagrams while reading this discussion, and refer to the schematic diagram for specific details.

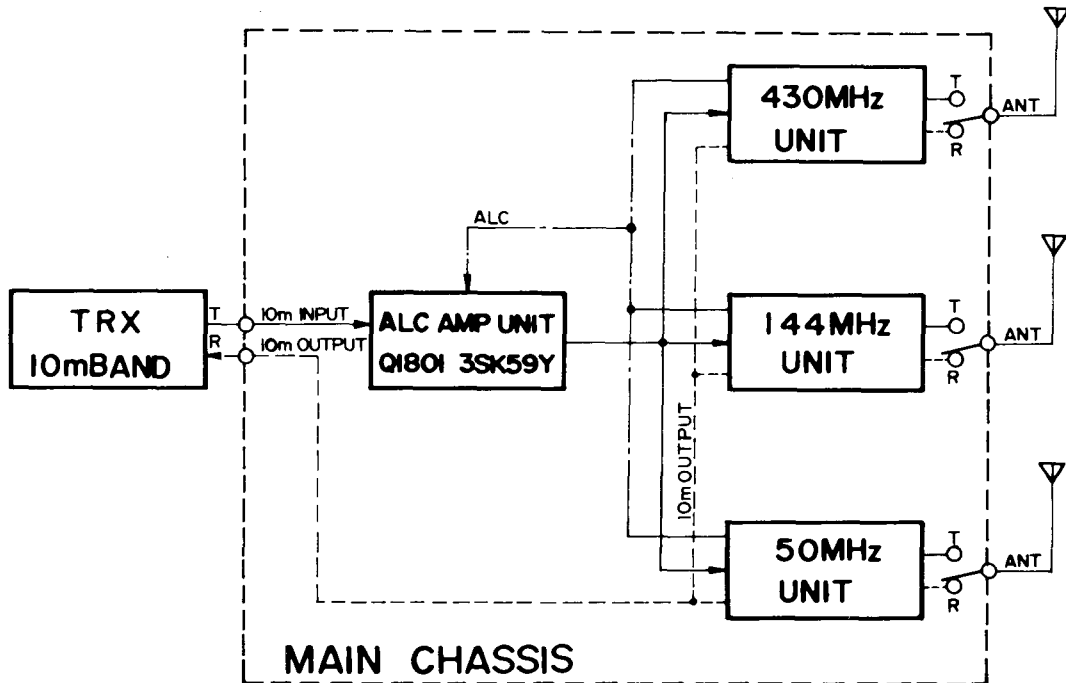

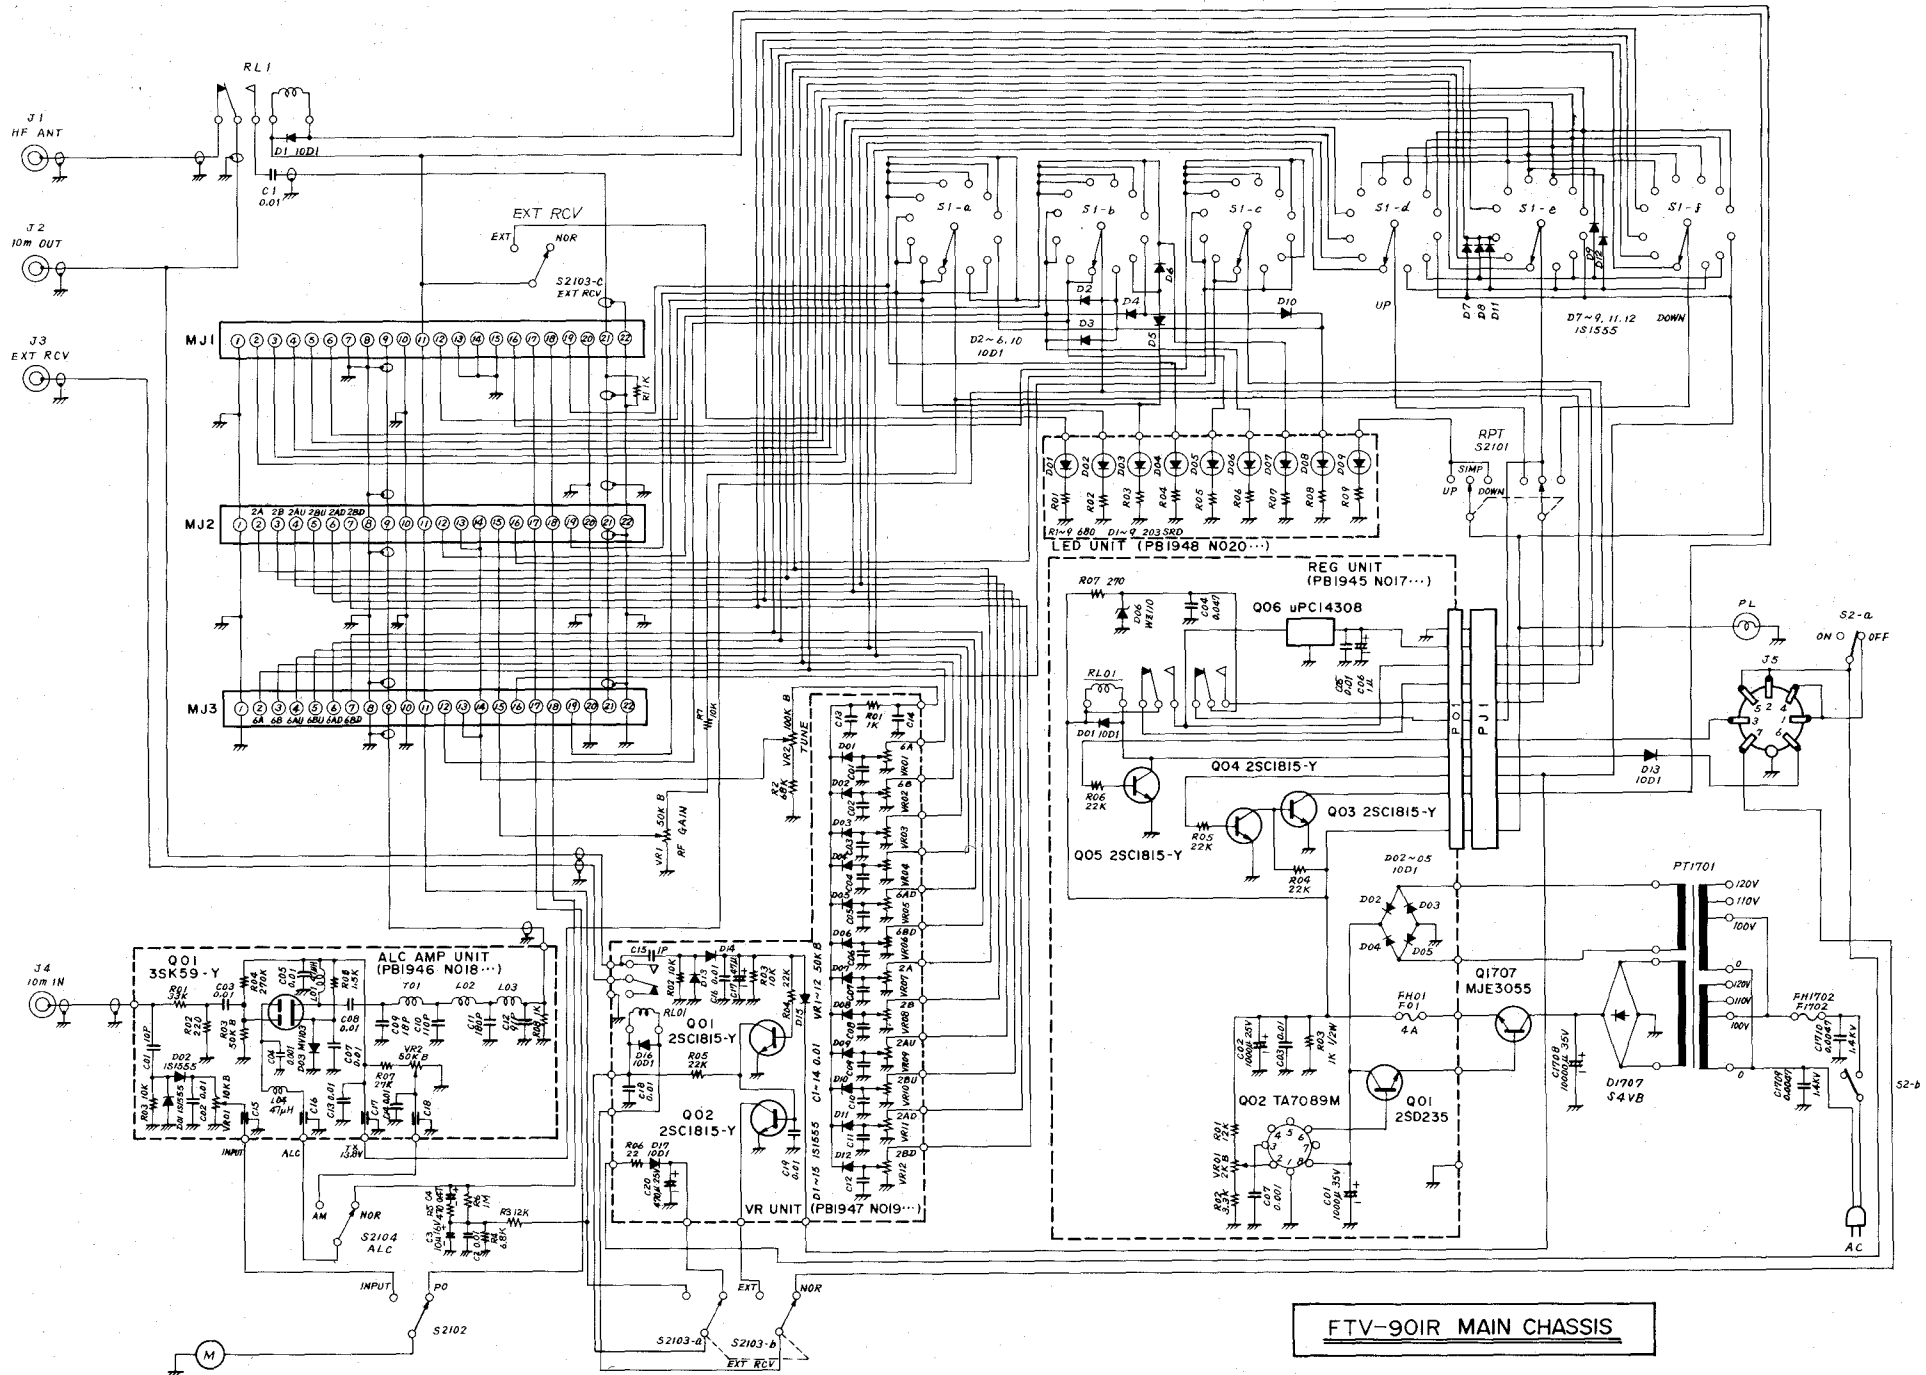

FTV-90IR MAIN CHASSIS

## 50 MHz UNIT

The 50 MHz signal from the antenna is fed through a low-pass filter, consisting of C<sub>323</sub>, C<sub>324</sub>, L<sub>312</sub>, and L<sub>313</sub>, to RL<sub>301</sub>. On receive, the signal is amplified by Q<sub>205</sub> (3SK51) and fed through a selective bandpass filter, which is tuned to the operating frequency by varactor diodes D<sub>210</sub> and D<sub>211</sub> (1S2209). The second gate of Q<sub>205</sub> is connected through a large resistor to the front panel RF GAIN control, allowing variation in the gain of the RF amplifier.

The signal is then fed to the mixer, Q<sub>206</sub> (3SK51), where the 50–54 MHz signal is mixed with a local signal of 22 or 24 MHz, producing an IF signal of 28–30 MHz which is fed through a diode switch to the 10 M OUTPUT jack.


The local signal is generated by crystal oscillator Q<sub>207</sub> (2SC784R), and amplified by Q<sub>208</sub> (2SC784R). For repeater operation, the local signal is shifted up or down 1 MHz, according to the position of the front panel RPT switch.


For transmission, the 28–30 MHz output signal from the transceiver is fed to the balanced mixer,

Q<sub>201</sub> (MC1496G), where it is mixed with the local signal delivered from Q<sub>208</sub>. The 50–54 MHz signal is then passed through a selective bandpass filter, which effectively eliminates spurious signals. The signal is then amplified by the amplifier chain, consisting of Q<sub>202</sub> (3SK51), Q<sub>203</sub> (2SC2053), Q<sub>204</sub> (2SC730), Q<sub>301</sub> (2SC2166), and Q<sub>302</sub> (2SC1945D). The output signal of approximately 10 watts is then fed, via a low pass filter, to the ANT jack.

A portion of the output from Q<sub>301</sub> is detected by D<sub>303</sub> and D<sub>304</sub> (1S1555), and the resulting DC voltage is amplified by Q<sub>211</sub> (2SC1815Y) for ALC purposes. A portion of the output from L<sub>311</sub> is detected by D<sub>306</sub> and fed to the base of Q<sub>211</sub>, controlling the bias of Q<sub>211</sub> and Q<sub>302</sub>. Q<sub>210</sub> (2SC1815Y) works as a switch for the automatic final protection circuit, which will reduce the gain of the amplifier transistors in case of high SWR. A further portion of the output is detected by D<sub>305</sub> (1S1555) and fed to the meter, for an indication of relative power output.

Q<sub>309</sub> (78L08) regulates the supply voltage at 8 volts for the transistors.

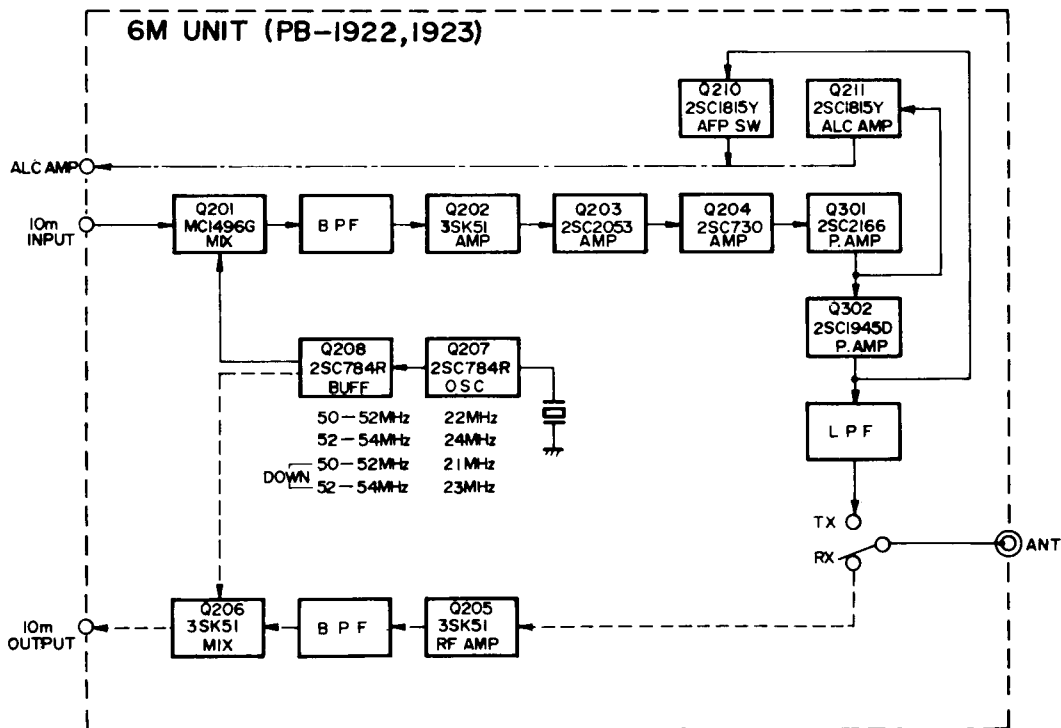

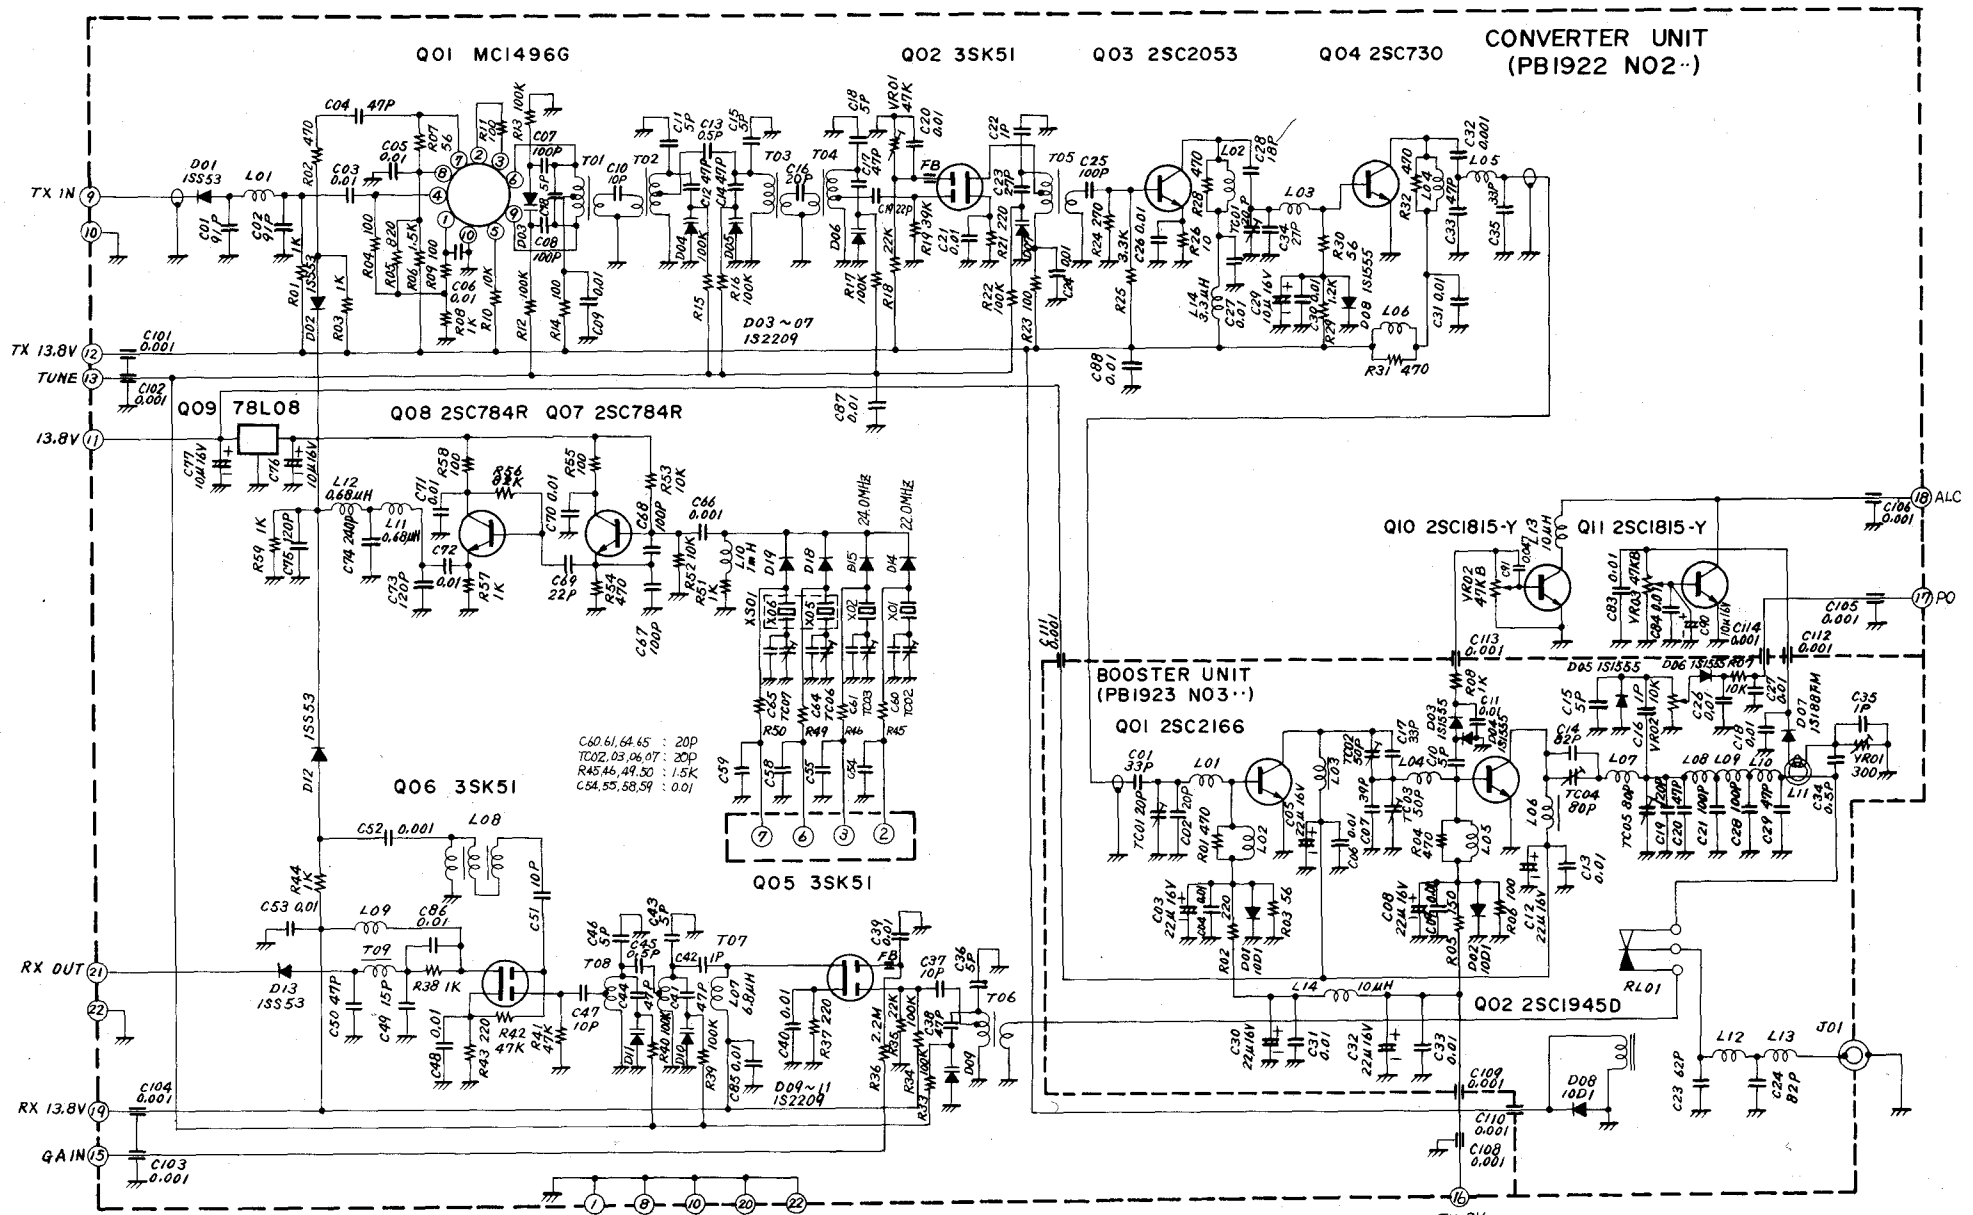

- |          |            |          |
|----------|------------|----------|
| ① E      | ⑦ 2ch up   | ⑬ TUNE   |
| ② 1ch    | ⑧ E        | ⑭ NC     |
| ③ 2ch    | ⑨ TX IN    | ⑮ GAIN   |
| ④ NC     | ⑩ E        | ⑯ TX 8V  |
| ⑤ NC     | ⑪ 13.8V    | ⑰ PO     |
| ⑥ 1ch up | ⑫ TX 13.8V | ⑱ RX OUT |
|          | ⑬ ALC      | ⑳ E      |

**6M UNIT CIRCUIT DIAGRAM**



## 144 MHz UNIT

The incoming 144 MHz signal is fed through a low-pass filter, consisting of L<sub>708</sub>, C<sub>716</sub>, and C<sub>717</sub> to RL<sub>701</sub>. On receive, the signal is amplified by Q<sub>605</sub> (3SK51). The output from Q<sub>605</sub> is fed through a 4-stage bandpass filter. Gate 2 of the RF amplifier is connected through a large resistor to the front panel RF GAIN control.

The signal is then fed to the mixer, Q<sub>606</sub> (3SK51), where the incoming signal is heterodyned with a local signal of 116 or 118 MHz, producing an IF signal of 28–30 MHz which is fed through a diode switch to the 10 M OUTPUT jack.


The local signal is generated at 38.666 MHz by Q<sub>607</sub> (2SC784R), then delivered to tripler Q<sub>608</sub> (2SC784R), then delivered through buffer Q<sub>609</sub> (2SC784R) to gate 2 of Q<sub>606</sub>. For repeater operation, the local signal is shifted up or down 600 kHz, depending on the position of the front panel RPT switch.

For transmission, the 28–30 MHz input signal is fed to Q<sub>601</sub> (MC1496G), where it is mixed with the local signal delivered from Q<sub>609</sub>. The 144–148 MHz signal is then fed through a selective


bandpass filter, which is tuned to the operating frequency by varactor diodes D<sub>602</sub>, D<sub>603</sub>, and D<sub>604</sub> (1S2209), thus effectively eliminating spurious responses. The signal is then amplified by the amplifier chain, consisting of Q<sub>602</sub> (3SK51), Q<sub>603</sub> (2SC2053), and Q<sub>604</sub> (2SC730), and delivered to the final amplifier, Q<sub>701</sub> (VP-20BL).

A portion of the output signal at the power module is amplified by Q<sub>612</sub> (2SC1815Y) for ALC purposes. A portion of the output signal is also fed to Q<sub>611</sub> (2SC1815Y), which acts as a switch for the AFP circuit, which will protect Q<sub>701</sub> from damage caused by high SWR. A further portion of the output is detected by D<sub>702</sub> (1S1555) and fed to the meter, for an indication of relative power output.

The supply voltage is regulated at 8 volts by Q<sub>510</sub> (78L08).

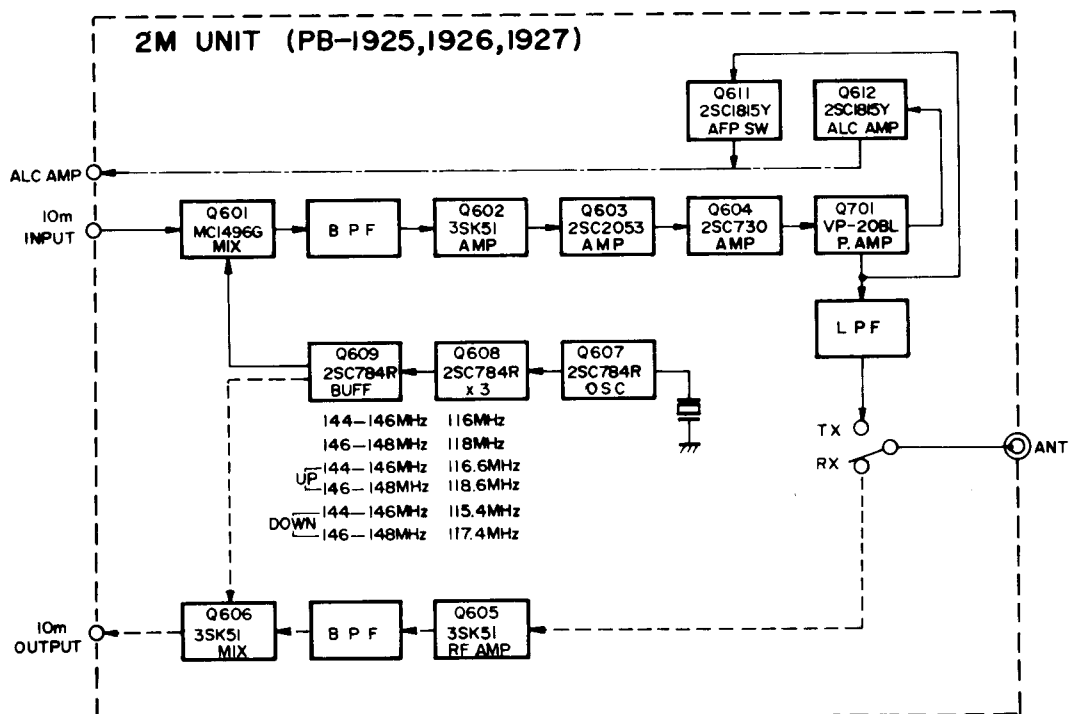

CONVERTER UNIT  
(PB1925 NO6..)

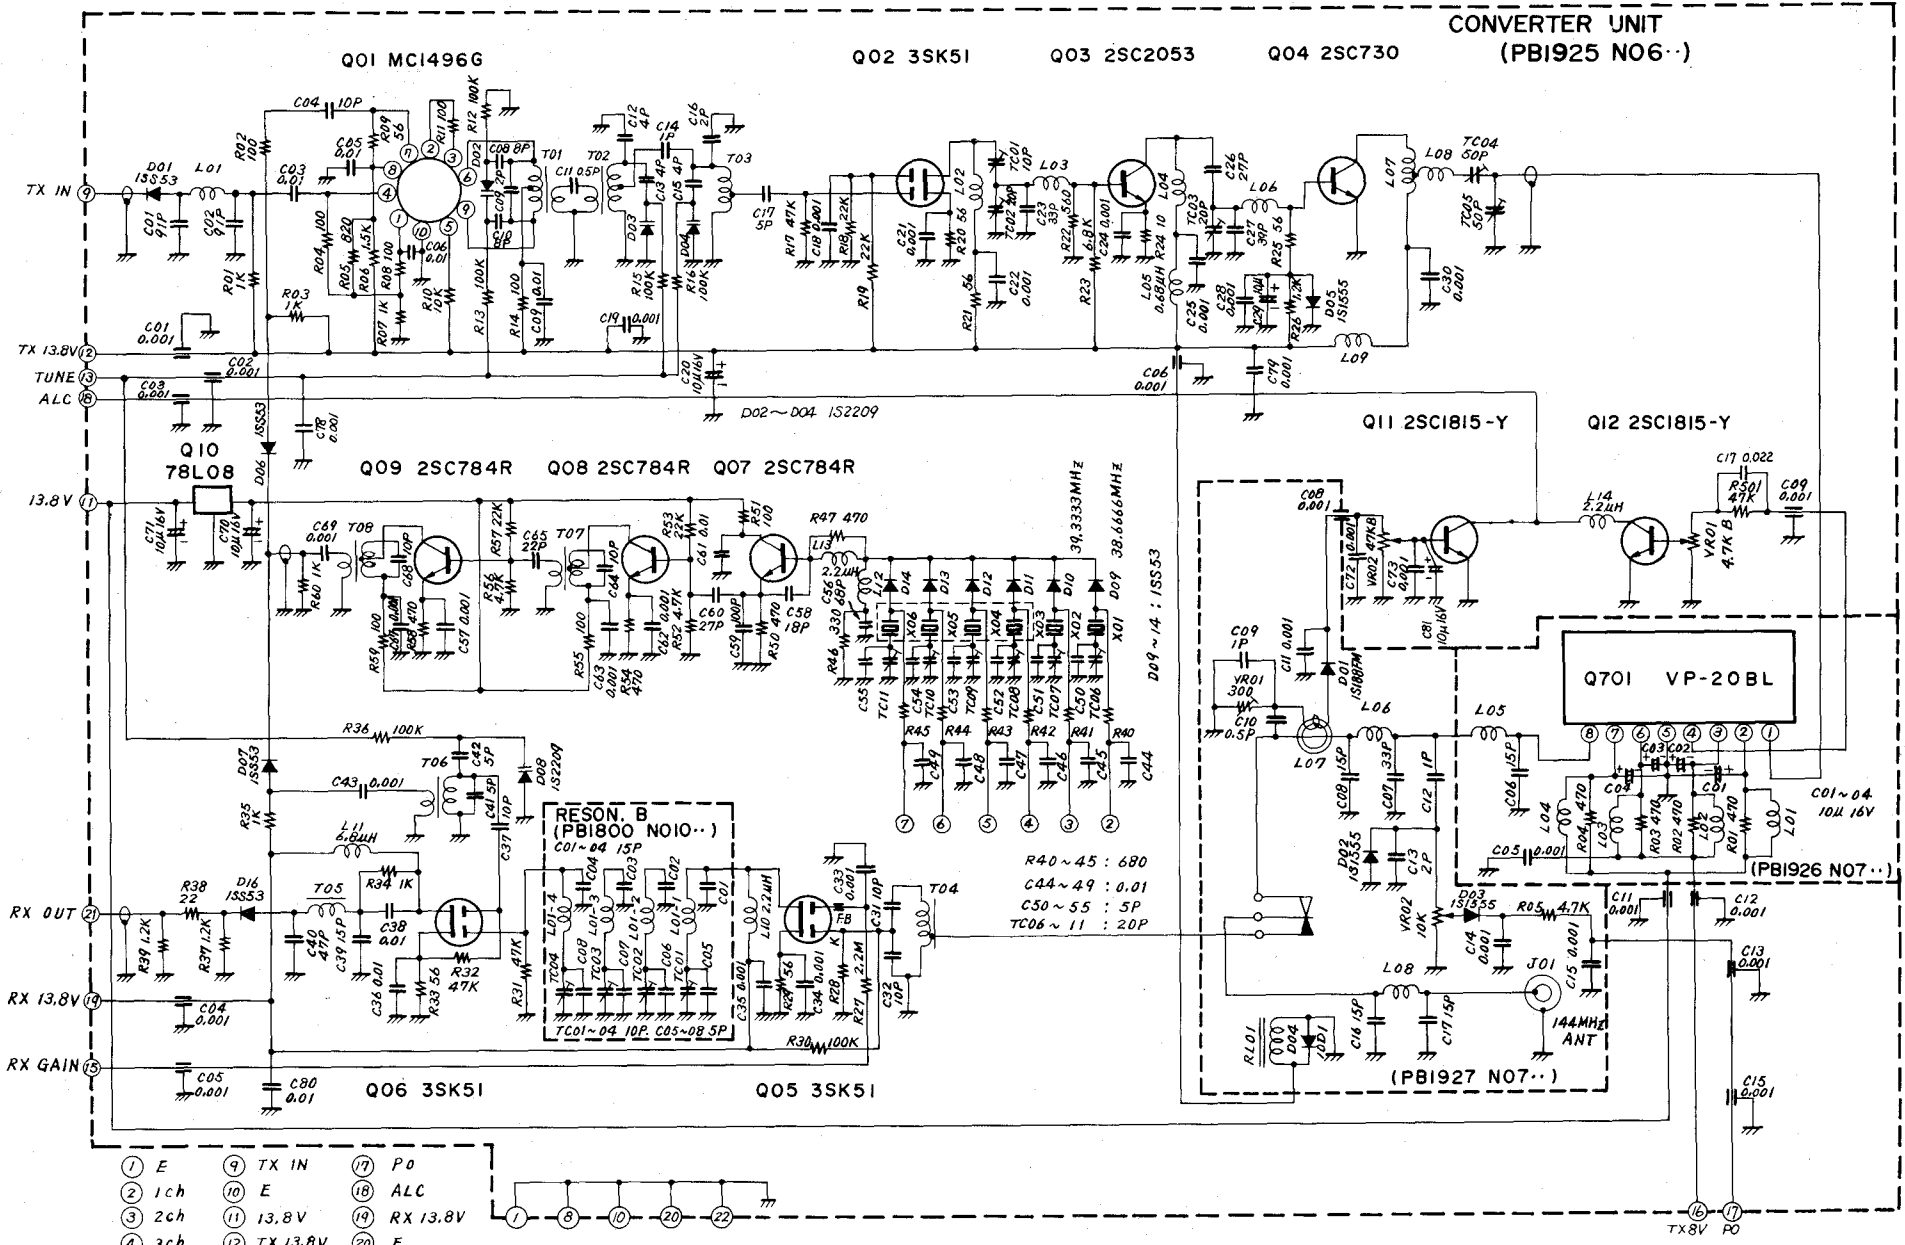

- |       |            |            |
|-------|------------|------------|
| ① E   | ⑨ TX IN    | ⑳ P0       |
| ② 1ch | ⑩ E        | ㉑ ALC      |
| ③ 2ch | ⑪ 13.8V    | ㉒ RX 13.8V |
| ④ 3ch | ⑫ TX 13.8V | ㉓ E        |
| ⑤ 4ch | ⑬ TUNE     | ㉔ RX OUT   |
| ⑥ 5ch | ⑭ NC       | ㉕ E        |
| ⑦ 6ch | ⑮ GAIN     |            |
| ⑧ E   | ⑯ TX 8V    |            |

**2M UNIT CIRCUIT DIAGRAM**

## 430 MHz UNIT

The incoming signal is fed through RL<sub>1301</sub> to the two stage RF amplifier, consisting of Q<sub>1201</sub> and Q<sub>1202</sub> (2SC2369), and then passed through a selective filter to the doubly balanced diode mixer, D<sub>1503</sub>–D<sub>1506</sub> (1SS43) where the incoming signal is mixed with a 402–410 MHz local signal, producing a 28–30 MHz output signal which is fed to the 10 M OUTPUT jack.


The local signal is generated at 67–68 MHz by oscillator Q<sub>1601</sub> (2SC784R), then multiplied by Q<sub>1602</sub> and Q<sub>1501</sub> (2SC1424). The local signal at 402–410 MHz is then passed through a selective filter to buffer Q<sub>1502</sub> (2SC1424), for delivery to the mixer.


For transmission, the output from the transceiver is delivered to the diode ring mixer, where it is heterodyned with the local oscillator signal, resulting in a signal of 430–440 MHz. The signal is then fed through a selective filter, which effectively eliminates spurious responses. The signal is then amplified by Q<sub>1203</sub> (2SC1424), fed through another selective filter, then amplified by the amplifier chain, consisting of Q<sub>1401</sub> (2SC1424),

Q<sub>1402</sub> (2SC1426), Q<sub>1403</sub> (2SC1426), and final amplifier Q<sub>1301</sub> (VP-07BL). The output signal from Q<sub>1301</sub> is fed through a stripline filter, via RL<sub>1301</sub>, to the ANT jack.

A portion of the output from L<sub>1306</sub> is detected by D<sub>1302</sub> (1S188FM) and fed to the base of Q<sub>1205</sub> (2SC1815Y), for control of the bias applied to Q<sub>1301</sub>. Q<sub>1204</sub> (2SC1815Y) acts as a switch for the automatic final protection circuit. A further portion of the output signal is rectified by D<sub>1303</sub> (1S188FM) and fed to the meter, providing indication of relative power output.

The supply voltage is regulated at 8 volts by Q<sub>1603</sub> (78L08).

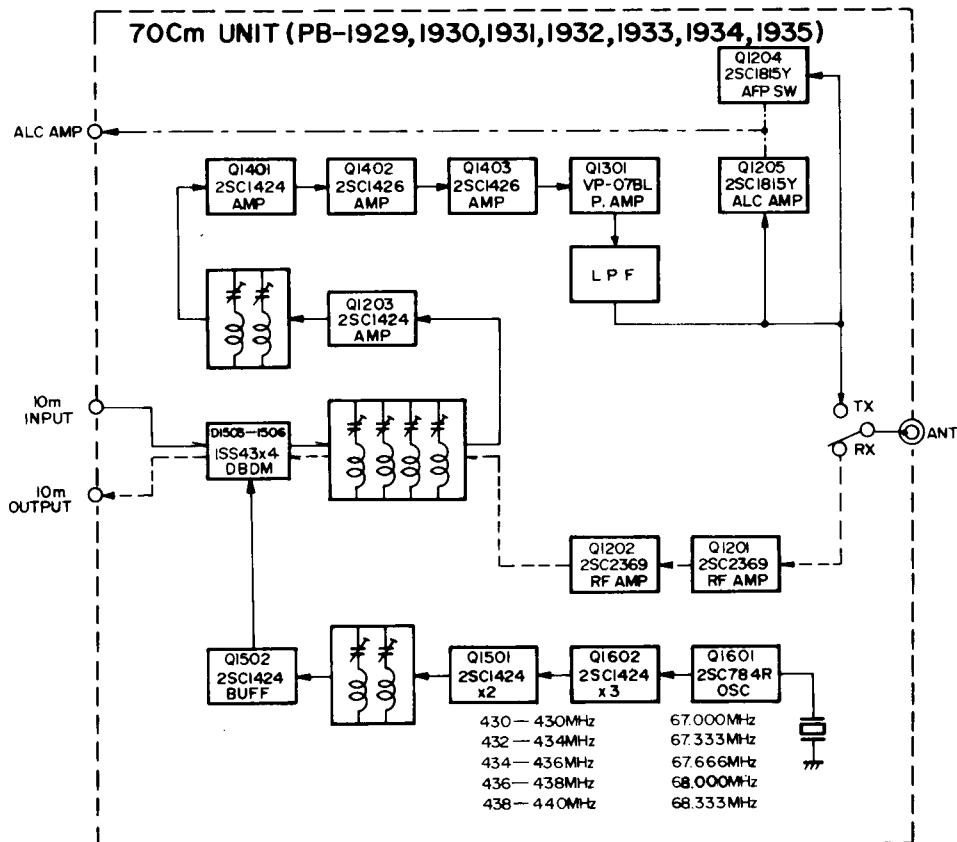

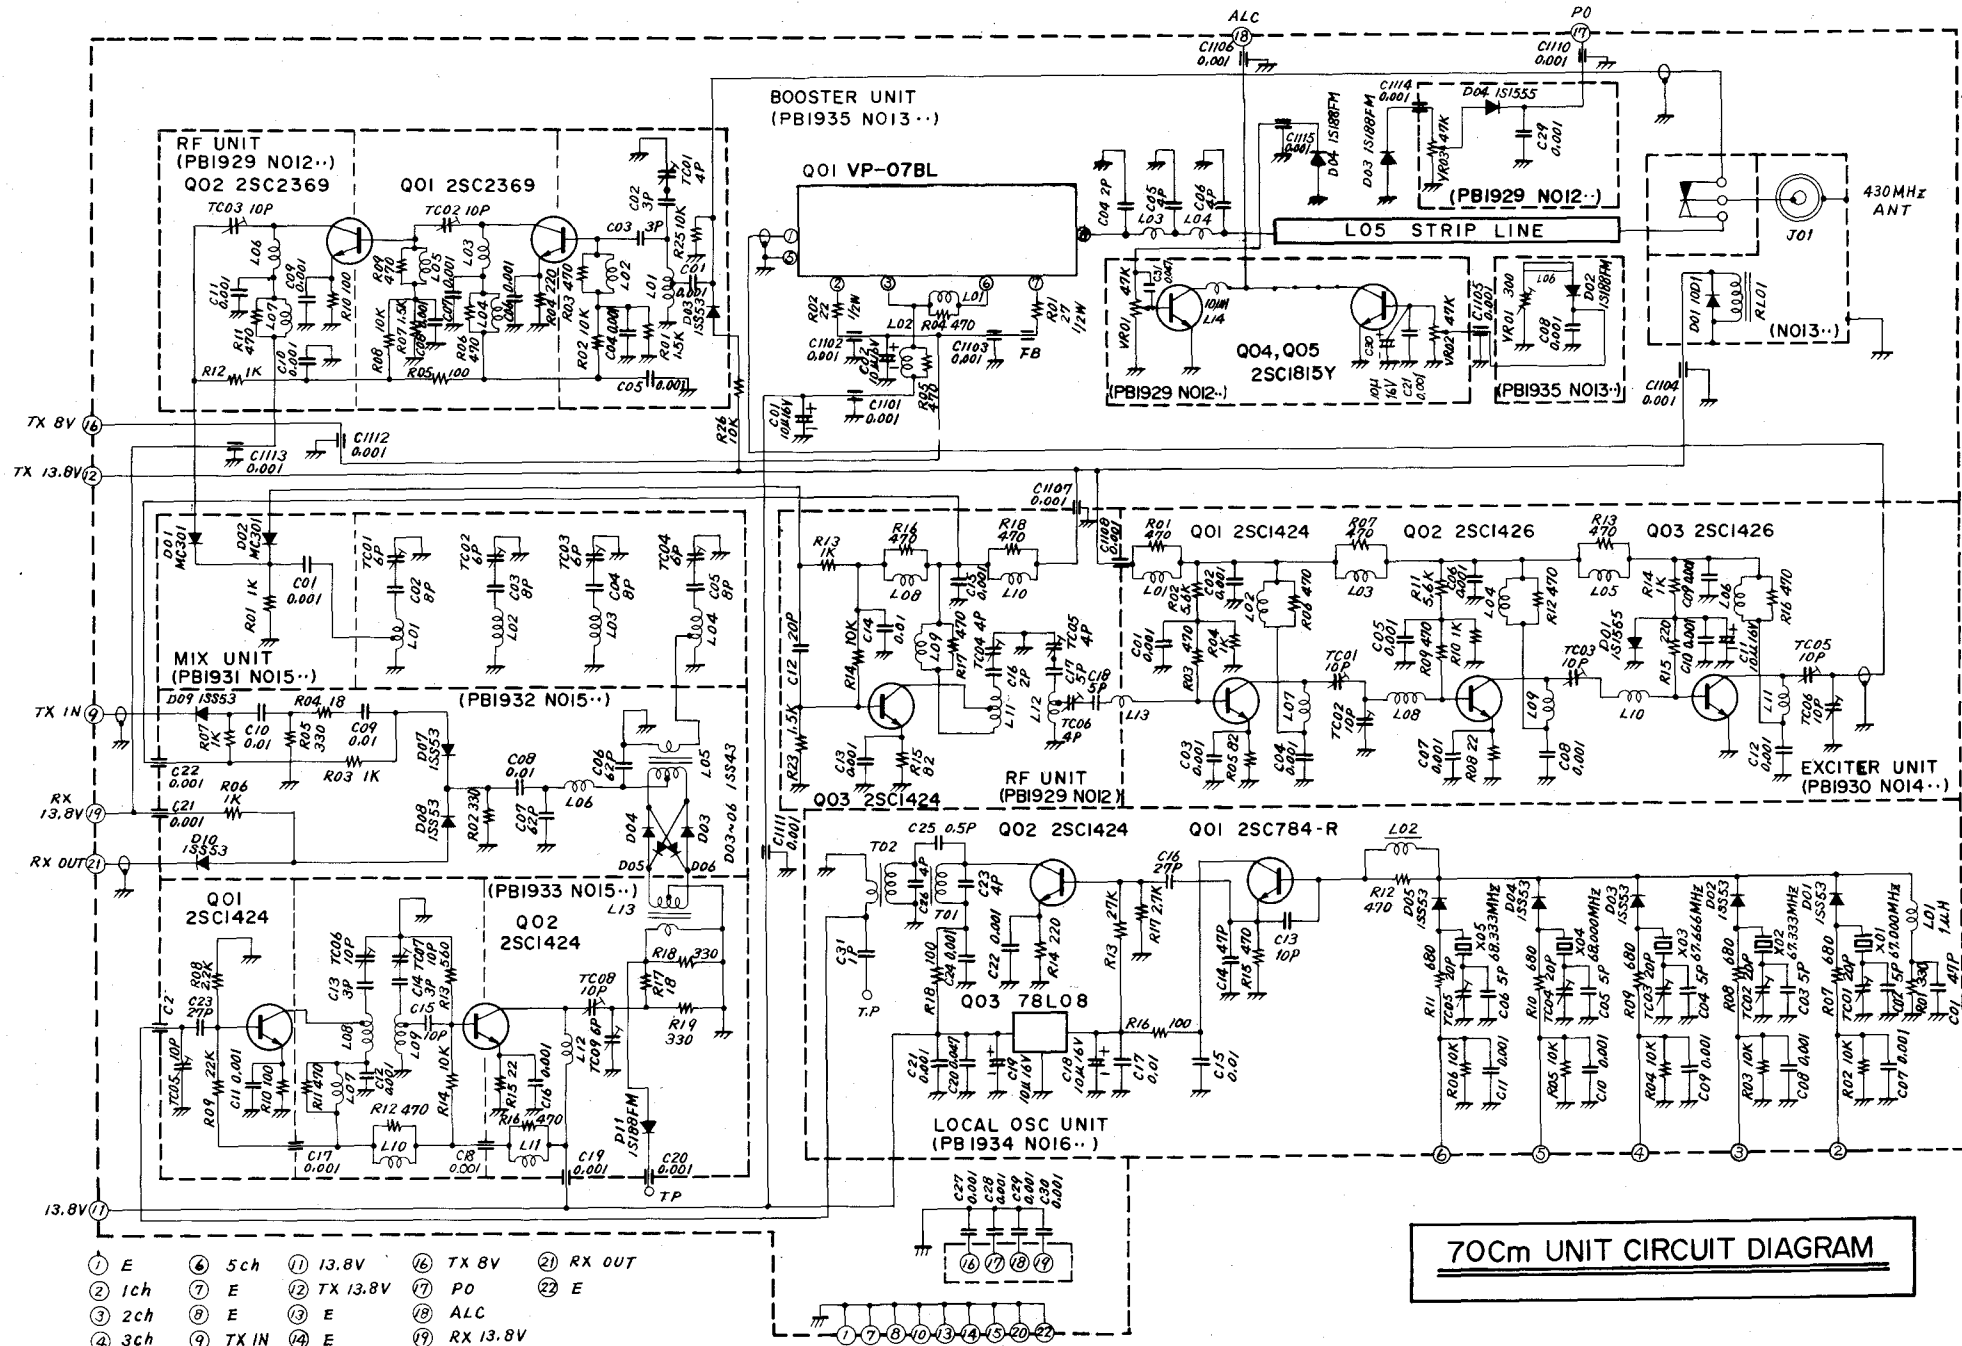

**70cm UNIT CIRCUIT DIAGRAM**

- ① E      ⑥ 5ch    ⑪ 13.8V    ⑰ TX 8V    ⑳ RX OUT
- ② 1ch    ⑦ E      ⑫ TX 13.8V ⑱ P0      ㉑ E
- ③ 2ch    ⑧ E      ⑬ E       ⑳ ALC
- ④ 3ch    ⑨ TX IN ⑭ E       ㉑ RX 13.8V
- ⑤ 4ch    ⑩ E      ⑮ E       ㉒ E

## ALC CIRCUIT

The 28 MHz input signal from the transceiver is fed to the ALC AMP unit, where it is amplified by Q<sub>1801</sub> (3SK59Y). Gate 1 receives the RF signal, while gate 2 is connected to the ALC voltage supplied from the various modules. The ALC voltage is used to control the gain of Q<sub>1801</sub>. In the AM mode, the ALC level is fixed, and no connection is made to the modules for the individual bands.

A portion of the input signal is detected by D<sub>1801</sub> and D<sub>1802</sub> (1S1555), for an indication of the input level on the meter.

## SWITCHING CIRCUITS

### (1) POWER switch OFF

Heater voltage from the transceiver appears at the ACC connector, when proper connections are made to the FTV-901R. When the transceiver heater switch is ON, and the FTV-901R power switch is OFF, RL<sub>1</sub> is set to OFF, and the 10 m OUT jack is connected to the HF ANT jack, permitting normal HF operation. After the transverter is turned off, a warmup time of approximately 1 minute is required to allow the transceiver tubes to reach operating temperature.

### (2) POWER switch ON

When the FTV-901R is turned on, voltage is applied to relay driver Q<sub>1703</sub> (2SC1815Y) turning it on. With the conduction of Q<sub>1703</sub>, RL<sub>1</sub> is

activated, connecting the 10 meter output to the various units of the transverter, according to the position of the bandswitch. When the heater switch is on, and the FTV-901R is not in use, RL<sub>1901</sub> switches the external receiver to the HF antenna on receive.


When the heater switch is turned off, Q<sub>1902</sub> (2SC1815Y) is switched on, switching the EXT RCV jack to be in parallel with the HF ANT jack, allowing monitoring on the external receiver. If the external receiver is not normally used for monitoring, the heater switch should always be left on.

## POWER SUPPLY

The AC voltage from the power transformer is rectified by bridge rectifier, and stabilized at 13.8 volts by Q<sub>1707</sub> (MJE3055), Q<sub>1701</sub> (2SD235), and Q<sub>1702</sub> (TA7089M). This voltage is used for the LED UNIT, pilot lamps, and the three converter units.

D<sub>1706</sub> (WZ110) provides 11 volts for the local oscillator diode switch circuits, while Q<sub>1706</sub> ( $\mu$ PC14308) regulates the 13.8 volt line from RL<sub>1701</sub> for the low voltage circuits.

On the VR UNIT, diode switches D<sub>1901</sub>–D<sub>1912</sub> (1S1555) select voltage regulating potentiometers VR<sub>1901</sub>–VR<sub>1912</sub>, for tuning the varactor-diode-tuned circuits in the various units.

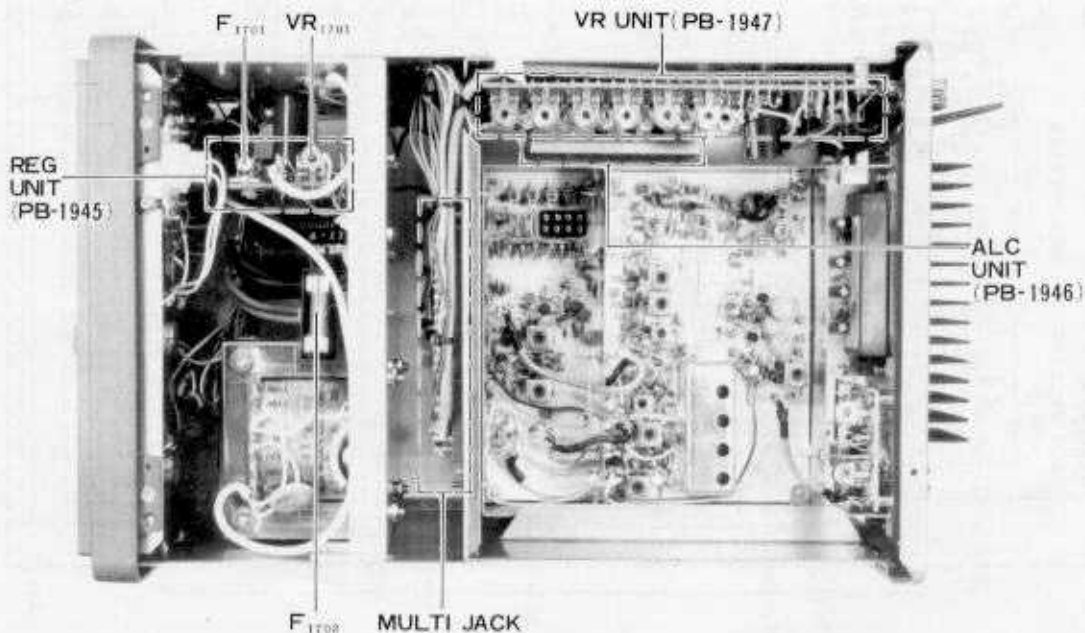

## MAINTENANCE AND ALIGNMENT

The FTV-901R has been carefully aligned and tested at the factory prior to shipment. With normal use, if the unit is not abused, the FT-901R will provide many years of trouble-free operation.

Sudden difficulties are usually the result of parts failures, rather than alignment problems. Therefore, alignment should not be undertaken unless the operation of the transverter is completely understood, the fault has been thoroughly diagnosed, and the trouble has been definitely traced to misalignment rather than part failure. Attempts to align this equipment by other than an experienced technician are discouraged.



For alignment purposes, a VTVM with RF probe good to 450 MHz is required. Also, a signal generator good to 450 MHz, and a frequency counter good to 250 MHz are required. A dummy load and wattmeter good to 450 MHz are also required.

### REG UNIT (PB-1975)

Connect a DC voltmeter to pin 11 of multijack MJ1, 2, or 3. Adjust VR<sub>1701</sub> for a reading of 13.8 volts.

### ALC AMP UNIT (PB-1946)

- (1) Set the HF transceiver to 29 MHz, CW mode.
- (2) Connect the RF probe of the VTVM to the input of the ALC AMP unit, and adjust the HF transceiver DRIVE or CARRIER control for an output of 3 volts RMS while transmitting.
- (3) Connect the DC voltmeter between the hot lead and case of C<sub>1818</sub>. Set the ALC meter to AM. Adjust VR<sub>1802</sub> for a reading of 5 volts on the voltmeter.
- (4) Connect the RF probe of the VTVM to the output of the ALC AMP unit. Adjust T<sub>1801</sub> for a maximum VTVM indication. Adjust VR<sub>1803</sub> for a maximum VTVM indication (0.7 volts nom.).
- (5) Set the FTV-901R meter switch to INPUT. Adjust VR<sub>1801</sub> for a reading of .2 on the meter.

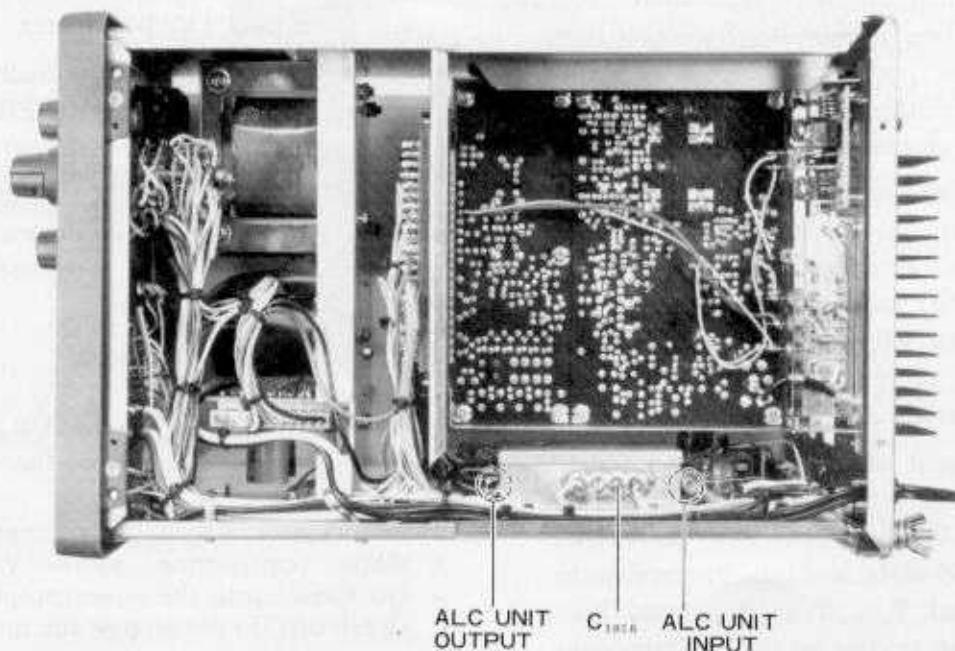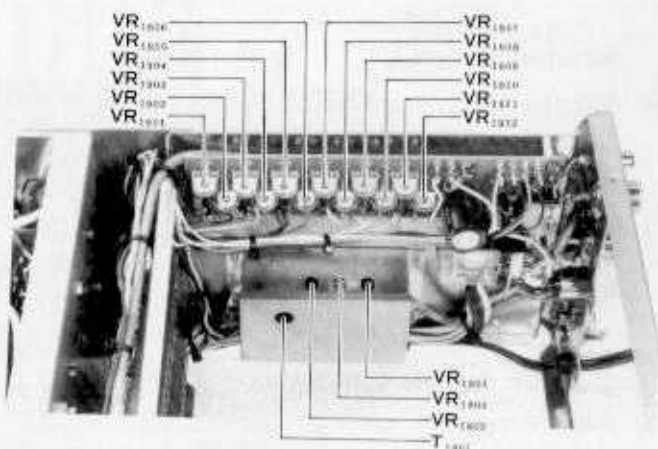

## 50 MHz UNIT

Please remove the 144 and 430 MHz units, if installed, to allow access to test points on the 50 MHz module.

### 1. Local oscillator circuit

- (1) Connect the DC voltmeter to pin 2 of the edge connector for the 50 MHz unit. Confirm that 11 volts is present, with the BAND switch set to 50–52 MHz. Switch to 52–54 MHz, and check for 11 volts at pin 3 of the edge connector.
- (2) Connect the RF probe of the VTVM to the LOCAL OUT terminal. Confirm that the unit is oscillating.
- (3) Connect a frequency counter to the LOCAL OUT terminal. Set the BAND switch to 50–52 MHz, set the RPT switch to SIMP, and adjust T<sub>202</sub> for a reading of exactly 22.0 MHz. Switch to 52–54 MHz, and adjust TC<sub>203</sub> for a reading of 24.0 MHz.

### 2. Receiver section

- (1) Set the HF transceiver to 29 MHz, and peak the preselector against the marker signal for maximum sensitivity.
- (2) Connect the DC voltmeter to pin 19 of the edge connector, set the BAND switch to 50–52 MHz, then 52–54 MHz, and confirm that 13.8 volts is present.
- (3) Connect the DC voltmeter to pin 15 of the edge connector, and rotate the FTV-901R RF GAIN control fully counterclockwise. The voltmeter reading should be 0 volts. In the fully clockwise position, it should be 13.8 volts. After confirming these voltages, please leave the level at maximum gain.
- (4) Connect the DC voltmeter to pin 14 of the edge connector, and set the FTV-901R TUNE control to the center position (12 o'clock). With the BAND switch in the 50–52 MHz position, adjust VR<sub>1901</sub> for a reading of 4 volts. Switch to 52–54 MHz, and adjust VR<sub>1902</sub> for a reading of 4 volts.
- (5) Connect a signal generator to the 50 MHz ANT jack, and set the FTV-901R BAND switch to 50–52 MHz. Set the signal generator to 51 MHz, and tune the receiver to its output. Peak T<sub>206</sub>, T<sub>207</sub>, T<sub>208</sub>, and T<sub>209</sub> for a maximum reading on the HF transceiver S-meter. Reduce the signal generator output,

if necessary, to secure easy viewing of the peak point. Switch to the 52–54 MHz band, set the signal generator output to 53 MHz, and repeat these transformers again while tuned to the generator frequency. Then recheck the results at 51 MHz.

### 3. Transmitter section

- (1) Connect a dummy load/wattmeter to the 50 MHz ANT jack. Set VR<sub>202</sub> and VR<sub>203</sub> fully counterclockwise. Set the HF transceiver DRIVE or CARRIER control to the center its range (12 o'clock). Set the BAND switch to 50–52 MHz.
- (2) Connect the RF probe of the VTVM to the collector of Q<sub>203</sub>. While transmitting, peak T<sub>201</sub>, T<sub>202</sub>, T<sub>203</sub>, T<sub>204</sub>, and T<sub>205</sub> for a maximum reading on the VTVM (0.4 volts RMS nom.).
- (3) Connect the RF probe to terminal A on the 50 MHz unit. Peak TC<sub>201</sub> and L<sub>205</sub> for a maximum reading on the VTVM (4 volts RMS nom.).
- (4) While transmitting, peak TC<sub>201</sub>, TC<sub>202</sub>, TC<sub>203</sub>, TC<sub>204</sub>, and TC<sub>205</sub> for a maximum power output indication on the wattmeter.
- (5) Repeat steps (2) through (4) on the 52–54 MHz band. Then recheck the results at 50–52 MHz.
- (6) Set the FTV-901R meter switch to the PO position, and set the transceiver DRIVE or CARRIER control for an output of 12 watts from the transverter. Set VR<sub>302</sub> for a reading of .8 on the FTV-901R meter.
- (7) Beginning at zero drive, gradually increase the transceiver DRIVE or CARRIER control until the output from the transverter does not increase more. Do not exceed this level.
- (8) Rotate VR<sub>202</sub> slowly clockwise, until an output of 12 watts is secured across the 50–54 MHz range.
- (9) Set VR<sub>203</sub> fully clockwise.
- (10) While transmitting, rotate VR<sub>301</sub> to secure maximum power output on the wattmeter.
- (11) Now rotate VR<sub>203</sub> fully counterclockwise. While transmitting, rotate VR<sub>203</sub> slowly clockwise, until the power output just begins to fall off. Do not go past the threshold point.

(12) Remove the dummy load from the antenna jack. While transmitting, confirm that the PO indication is .2 with no load applied. If not, check the AFP circuit for malfunctioning part.



(13) Connect the RF probe of the VTVM to the LOCAL OUT terminal. Set the BAND switch to 50-52 MHz, then switch the repeater switch to UP and DOWN. Confirm that oscillation is taking place. Repeat on 52-54 MHz.

(14) Connect the frequency counter to the LOCAL OUT terminal. Adjust TC<sub>204</sub>-TC<sub>206</sub> as shown in the chart below.

(15) Set the TUNE control to the center of its range. Adjust the potentiometers for maximum power output while transmitting into the dummy load, as shown in the chart below.

BAND SWITCH	RPT SWITCH	ADJUST	RESULT
50-52	DOWN	VR <sub>1005</sub>	MAXIMUM
52-54	DOWN	VR <sub>1006</sub>	OUTPUT

BAND SWITCH	RPT SWITCH	ADJUST	FREQUENCY
50-52	DOWN	TC <sub>206</sub>	21.0MHz
52-54	DOWN	TC <sub>207</sub>	23.0MHz

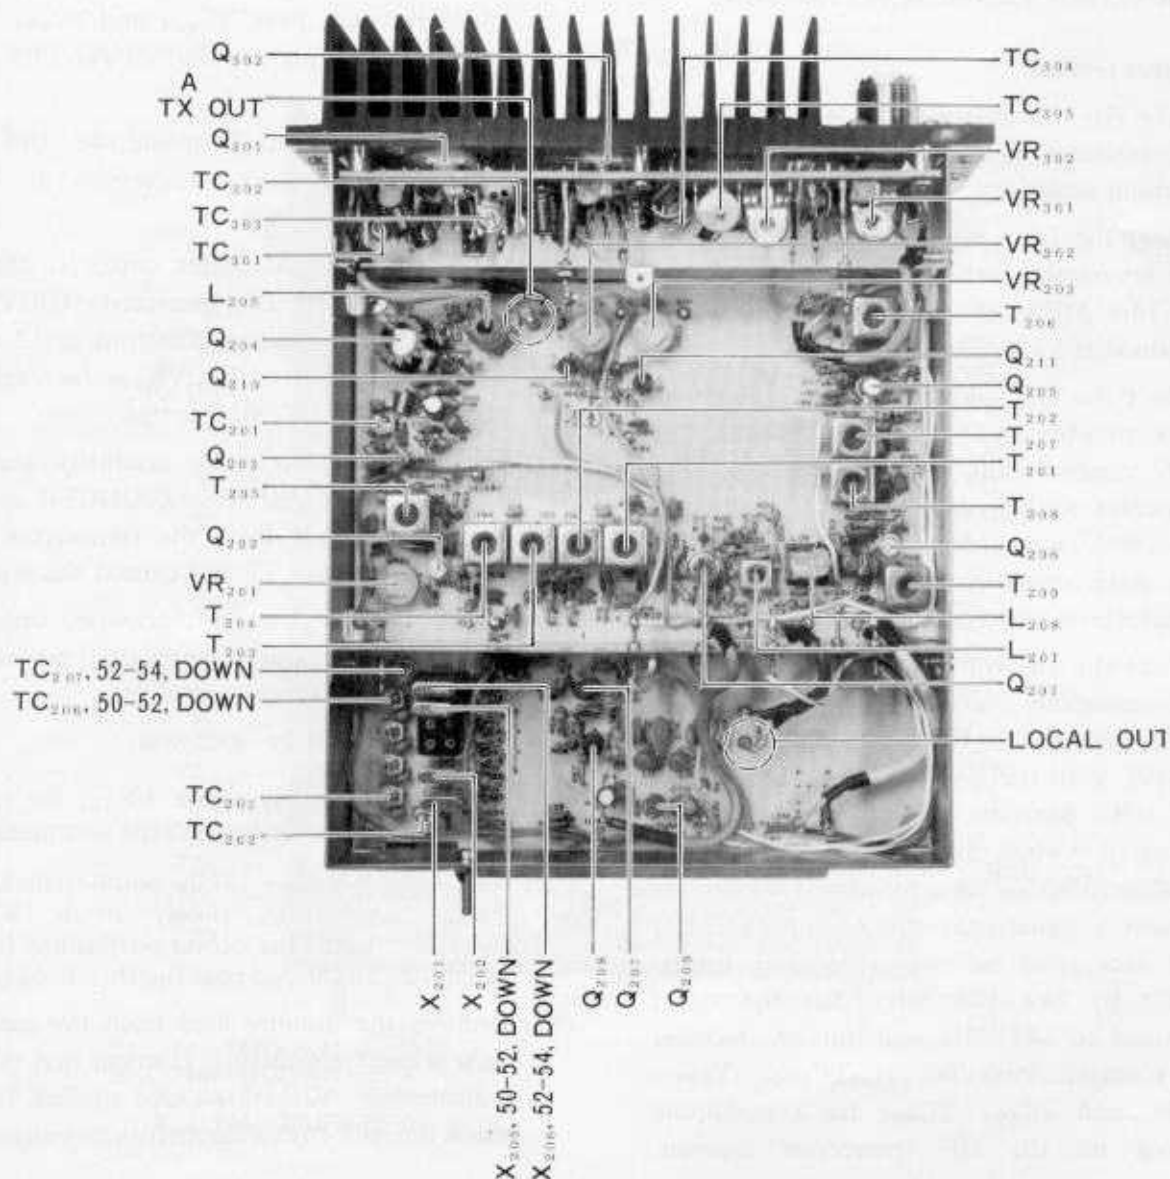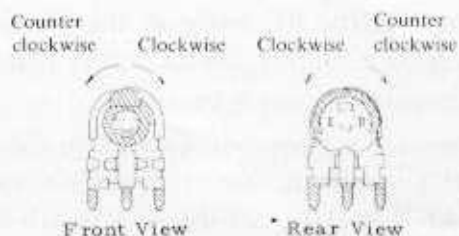



## 144 MHz UNIT

Please remove the 50 and 430 MHz units, if installed, to allow access to test points on the 144 MHz module.

### 1. Local oscillator circuit

- (1) Connect the DC voltmeter to pin 2 of the edge connector for the 144 MHz unit. Confirm that 11 volts is present, with the BAND switch set to 144–146 MHz. Switch to 146–148 MHz, and check for 11 volts at pin 3 of the edge connector.
- (2) Connect the RF probe of the VTVM to the LOCAL OUT terminal. Confirm that the unit is oscillating.
- (3) Connect a frequency counter to the LOCAL OUT terminal. Set the BAND switch to 144–146 MHz, set the RPT switch to SIMP, and adjust TC<sub>606</sub> for a reading of exactly 116.0 MHz. Switch to 146–148 MHz, and adjust TC<sub>607</sub> for a reading of 118.0 MHz.

### 2. Receiver section

- (1) Set the HF transceiver to 29 MHz, and peak the preselector against the marker signal for maximum sensitivity.
- (2) Connect the DC voltmeter to pin 19 of the edge connector, set the BAND switch to 144–146 MHz, the 146–148 MHz, and confirm that 13.8 volts is present.
- (3) Connect the DC voltmeter to pin 15 of the edge connector, and rotate the FTV-901R RF GAIN control fully counterclockwise. The voltmeter reading should be 0 volts. In the fully clockwise position, it should be 13.8 volts. After confirming these voltages, please leave the level at maximum gain.
- (4) Connect the DC voltmeter to pin 14 of the edge connector, and set the FTV-901R TUNE control to the center position (12 o'clock). With the BAND switch in the 144–146 MHz position, adjust VR<sub>1907</sub> for a reading of 4 volts. Switch to 146–148 MHz, and adjust VR<sub>1908</sub> for a reading of 4 volts.
- (5) Connect a signal generator to the 144 MHz ANT jack, and set the FTV-901R BAND switch to 144–146 MHz. Set the signal generator to 145 MHz, and tune the receiver to its output. Peak TC<sub>1001</sub>–TC<sub>1004</sub>, T<sub>604</sub>–TC<sub>606</sub>, and TC<sub>601</sub>–TC<sub>604</sub> for a maximum reading on the HF transceiver S-meter.

Reduce the signal generator output, if necessary, to secure easy viewing of the peak point. Switch to the 140–148 MHz band, set the signal generator output to 147 MHz, and repeak these transformers again while tuned to the generator frequency. Then recheck the results at 145 MHz.

### 3. Transmitter section.

- (1) Connect a dummy load/wattmeter to the 144 MHz ANT jack. Set VR<sub>601</sub> and VR<sub>602</sub> fully counterclockwise. Set the HF transceiver DRIVE or CARRIER control to the center of its range (12 o'clock). Set the BAND switch to 144–146 MHz.
- (2) Connect the RF probe of the VTVM to the collector of Q<sub>603</sub>. While transmitting, peak T<sub>601</sub>–T<sub>603</sub>, TC<sub>601</sub>, and TC<sub>602</sub> for a maximum reading on the VTVM (0.9 volts RMS nom.).
- (3) Connect the RF probe to terminal A on the 144 MHz unit. Peak TC<sub>604</sub> and TC<sub>605</sub> for a maximum reading on the VTVM (2.5 volts RMS nom.).
- (4) Repeat steps (2) and (3) on the 146–148 MHz band. Then recheck the results at 144–146 MHz.
- (5) Set the FTV-901R meter switch to the PO position, and set the transceiver DRIVE or CARRIER control for an output of 12 watts from the transverter. Set VR<sub>702</sub> for a reading of .8 on the FTV-901R meter.
- (6) Beginning at zero drive, gradually increase the transceiver DRIVE or CARRIER control until the output from the transverter does not increase more. Do not exceed this level.
- (7) Rotate VR<sub>601</sub> slowly clockwise, until an output of 12 watts is secured across the 144–148 MHz range.
- (8) Rotate VR<sub>602</sub> fully clockwise.
- (9) While transmitting, rotate VR<sub>701</sub> to secure maximum power output on the wattmeter.
- (10) Now rotate VR<sub>602</sub> fully counterclockwise. While transmitting, slowly rotate VR<sub>602</sub> clockwise, until the power output just begins to fall off. Do not go past the threshold point.
- (11) Remove the dummy load from the antenna jack. While transmitting, confirm that the PO indication is .2 with no load applied. If not, check the AFP circuit for malfunctioning parts.


- (12) Connect the RF probe of the VTVM to the LOCAL OUT terminal. Set the BAND switch to 144-146 MHz, then switch the repeater switch to UP and DOWN. Confirm that oscillation is taking place. Repeat on 146-148 MHz.
- (13) Connect the frequency counter to the LOCAL OUT terminal. Adjust TC<sub>608</sub>-TC<sub>611</sub> as shown in the chart below.

BAND SWITCH	RPT SWITCH	ADJUST	FREQUENCY
144-146	UP	TC <sub>608</sub>	116.6MHz
	DOWN	TC <sub>610</sub>	115.4MHz
146-148	UP	TC <sub>609</sub>	118.6MHz
	DOWN	TC <sub>611</sub>	117.4MHz

- (14) Set the TUNE control to the center of its range. Adjust the potentiometers for maximum power output while transmitting into the dummy load, as shown in the chart below.

BAND SWITCH	RPT SWITCH	ADJUST	RESULT
144-146	UP	VR <sub>600</sub>	MAXIMUM OUTPUT
	DOWN	VR <sub>601</sub>	
146-148	UP	VR <sub>600</sub>	MAXIMUM OUTPUT
	DOWN	VR <sub>601</sub>	

- (15) Adjust T<sub>607</sub> and T<sub>608</sub> for identical power output with the RPT switch in the UP and DOWN positions.

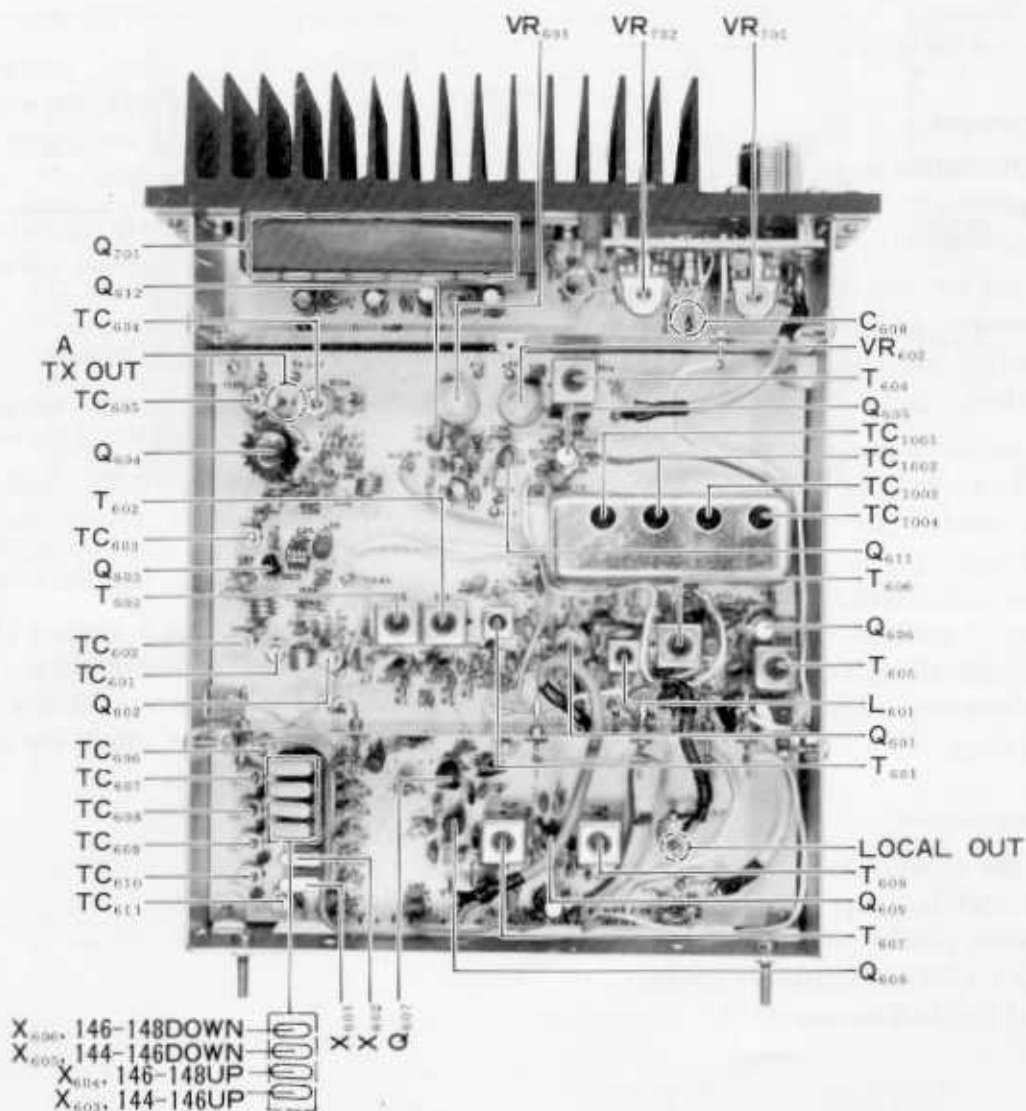

## 430 MHz UNIT

Please remove the 50 and 144 MHz units, if installed, to allow access to test points on the 430 MHz unit.

### 1. Local oscillator circuit

- (1) Connect a DC voltmeter to pin 2 of the edge connector for the 430 MHz unit. Set the BAND switch to 430–432, and confirm that 11 volts is present. In turn, check pins 3, 4, 5, and 6 for 11 volts, while switched to the 432–434, 434–436, 436–438, and 438–440 MHz bands, respectively.
- (2) Connect the RF probe of the VTVM to TP<sub>1</sub>, and adjust L<sub>1602</sub>, T<sub>1601</sub>, and T<sub>1602</sub> for maximum indication on the VTVM.
- (3) Connect the frequency counter to TP<sub>1</sub>. Refer to the chart below, and adjust TC<sub>1601</sub>–TC<sub>1605</sub> for local output readings as shown for the various positions of the BAND switch.
- (4) Connect the DC voltmeter to TP<sub>2</sub>, and adjust TC<sub>1505</sub>–TC<sub>1509</sub> for maximum indication on the voltmeter (1 volt nom.).


### 2. Receiver section


- (1) Set the transceiver to 29 MHz, and peak the receiver preselector against the marker signal for maximum sensitivity.
- (2) Connect the DC voltmeter to pin 19 of the edge connector, and check for 13.8 volts at each position of the BAND switch over 430–440 MHz.
- (3) Connect the signal generator to the 430 MHz ANT jack, set its output to 431 MHz, and tune the receiver to the generator signal. Adjust TC<sub>1201</sub>–TC<sub>1203</sub> and TC<sub>1501</sub>–TC<sub>1504</sub> for a maximum S-meter indication on the HF transceiver. Repeat on 433 MHz, 435 MHz, 437 MHz, and 439 MHz. Recheck the results to ensure maximum response across the entire operating range.

### 3. Transmitter section

- (1) Connect the dummy load/wattmeter to the 430 MHz ANT jack. Set VR<sub>1201</sub> and VR<sub>1202</sub> fully counter clockwise. Set the transceiver DRIVE or CARRIER control to the center of its range (12 o'clock position).

- (2) Connect the RF probe of the VTVM to the cathode of D<sub>1502</sub>. Peak TC<sub>1501</sub>–TC<sub>1504</sub> for a maximum indication on the VTVM while transmitting.
- (3) Connect the RF probe of the VTVM to the hot side of L<sub>1213</sub>. Peak TC<sub>1203</sub>–TC<sub>1206</sub> for a maximum indication on the VTVM.
- (4) Connect the RF probe of the VTVM to terminal A on the 430 MHz unit. Peak TC<sub>1401</sub>–TC<sub>1406</sub> for a maximum indication on the VTVM.
- (5) Confirm the results in steps (2) through (4) on the wattmeter.
- (6) Repeat the points in steps (2) through (5) on each position of the BAND switch, then recheck the results to ensure maximum performance over the entire range 430–440 MHz.
- (7) Set the meter switch to PO. Set the transceiver DRIVE or CARRIER control for an output of 12 watts. Adjust VR<sub>1203</sub> for an indication of .8 on the PO meter.
- (8) Beginning at zero drive, increase the level of the DRIVE or CARRIER control on the transceiver until the transverter power output does not increase further.
- (9) Advance VR<sub>1201</sub> slowly clockwise until equal power output is achieved across the 430–440 MHz range.
- (10) Rotate VR<sub>1202</sub> fully clockwise.
- (11) While transmitting, rotate VR<sub>1301</sub> to secure maximum power output on the wattmeter.
- (12) Now rotate VR<sub>1202</sub> fully clockwise. While transmitting, slowly rotate VR<sub>1202</sub> counter-clockwise, until the power output just begins to fall off. Do not go past the threshold point.
- (13) Remove the dummy load from the 430 MHz ANT jack. While transmitting, check to be sure that the PO meter indicates .2 with no load applied. If not, check the AFP unit for malfunctioning parts.

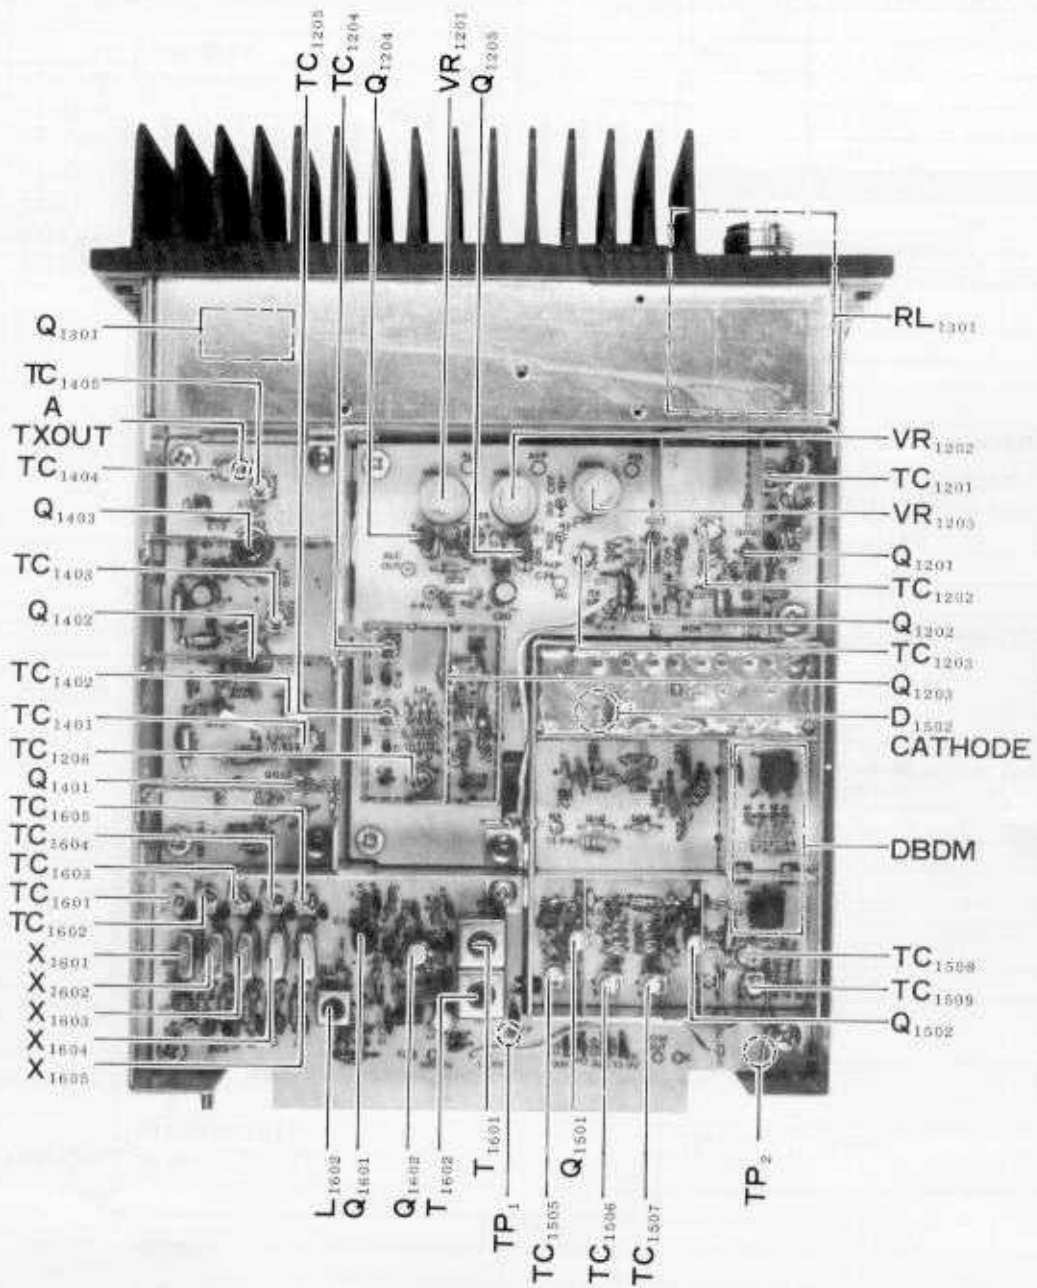

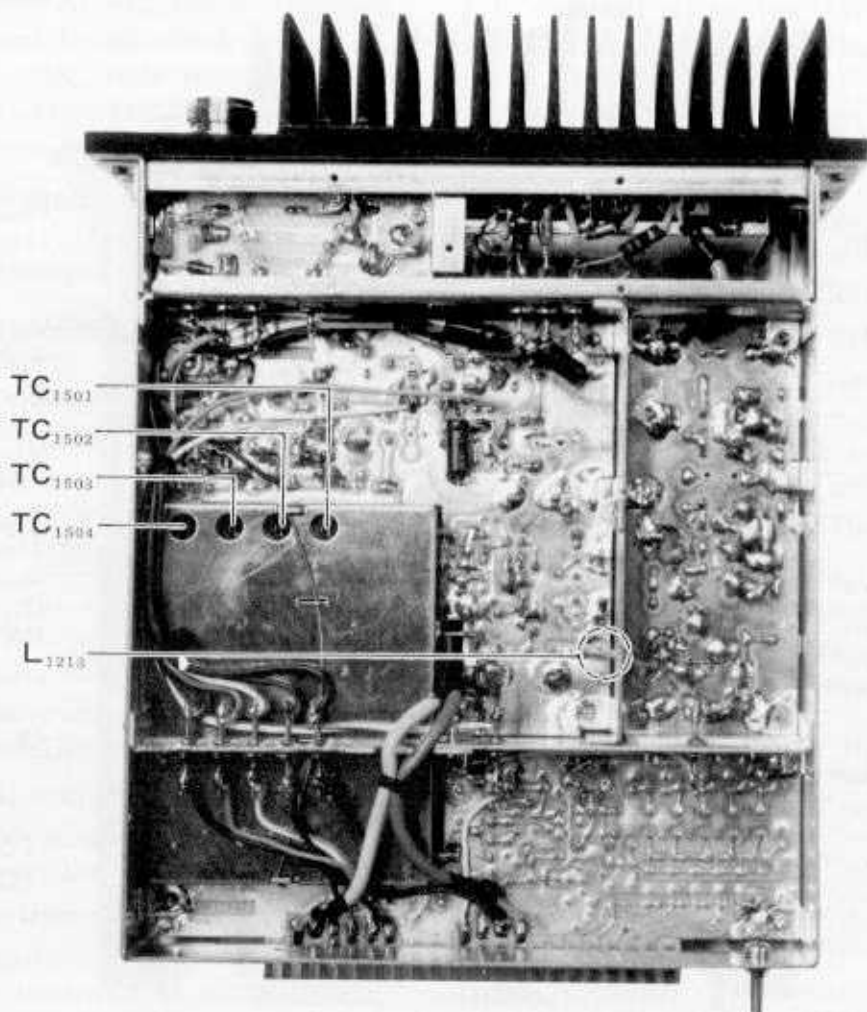

## FTV-901R PARTS LIST

MAIN CHASSIS						MULTI JACK	
Symbol No.	Parts No.	Description	MJ1-3	68220003	121S-22B-105A		
		<b>DIODE</b>					
D1-6, 10, 13	21090011	Silicon Diode 10D1					
D7-9, 11, 12	21015550	" " 1S1555					
						<b>PLUG</b>	
			P1	68120006	5065-112 with wire	#240117	
		<b>RESISTOR</b>					
R5	41143471	Carbon Film 1/4 TJ 470 Ω					
R1	42144102	" Composition " GK 1 kΩ					
R4	40143682	" Film " VJ 6.8 kΩ					
R7	41143103	" " " TJ 10 kΩ					
R3	40143123	" " " VJ 12 kΩ					
R2	41143683	" " " TJ 68 kΩ					
R6	41143105	" " " " 1 MΩ					
						<b>50 MHz UNIT</b>	
			Symbol No.	Parts No.	Description		
					***** MAIN CHASSIS *****		
			C101-106, 108-114	32821102	Ceramic Feed Thru ECK-Y1H102WE		
		<b>POTENTIOMETER</b>					
VR1	49800120	VM10A50KΩB 50 kΩB			***** 50 MHz CONVERTER MAIN BOARD *****		
VR2	49800121	VM10A100KΩB 100 kΩB	PB-1922	60419220	Printed Circuit Board		
				019220AZ	PCB with Components		
		<b>CAPACITOR</b>					
C1, 2	30820103	Ceramic Disc 50 WV 0.01 μF				<b>IC, FET, TRANSISTOR</b>	
C4	36526474	Tantalum 35 WV 0.47 μF	Q201	25000101	IC	MC1496G	
C3	34220106	Electrolytic 16 WV TW 10 μF	Q209	25000128	"	78L08	
			Q202,205,206	23800510	FET	3SK51	
			Q203	22320530	Transistor	2SC2053	
			Q204	22307300	"	2SC730	
		<b>METER</b>	Q207, 208	22307842	"	2SC784R	
M1	74000380	#250035 200 μA	Q210, 211	22318154	"	2SC1815Y	
		<b>RELAY</b>				<b>DIODE</b>	
RL1	70000002	MX-2P 12 V	D201, 202 212, 213	21090113	Silicon	1SS53	
			D208, 214- 219	21015550	"	1S1555	
		<b>RELAY SOCKET</b>	D203-207, 209-211	21022090	Varactor	1S2209	
RLS1	69000003	PX-08					
		<b>SWITCH</b>				<b>CRYSTAL</b>	
S1	61000610	S21-6612	X201	71800140	HC-18/U	22.0 MHz	
S2	66400003	WD-2301	X202	71800141	"	24.0 MHz	
			X203	71800142	"	23.0 MHz	
			X205	71800139	"	21.0 MHz	
		<b>RECEPTACLE</b>					
J1, 3	68000001	MBR-06B					
J2, 4	68020001	CN-7017J				<b>CRYSTAL SOCKET</b>	
J5	68070027	D7-701B00	XS201	69010013	S-14-4P		

		<b>RESISTOR</b>				C273, 275	31829121	Ceramic Disc	50WV	SL	120 pF
R226	40143100	Carbon Film	1/4S	VJ	10 Ω	C274	31829241	"	"	"	240 pF
R207, 230	40143560	"	"	"	56 Ω	C232,252,266	30820102	"	"	"	0.001 μF
R204,209,211, 214,223,255, 258	40143101	"	"	"	100 Ω	C205,206,209, 220,221,224, 226,227,230, 231,239,240, 248,	30820103	"	"	"	0.01 μF
R221,237,243	40143221	"	"	"	220 Ω	253-259, 270-272, 283-288, 292					
R224	40143271	"	"	"	270 Ω	C291	36825473	Mylar	50WV		0.047 μF
R202, 254	40143471	"	"	"	470 Ω	C229,276,277, 290	34220106	Electrolytic	16WV		10 μF
R205	41143821	"	"	1/4	TJ	820 Ω					
R201,203,208, 238,244,251, 257,259	40143102	"	"	1/4S	VJ	1 kΩ					
R229	40143122	"	"	"	1.2 kΩ						
R206, 245- 250	40143152	"	"	"	1.5 kΩ						
R225	40143332	"	"	"	3.3 kΩ						
R210,252,253	40143103	"	"	"	10 kΩ						<b>TRIMMER CAPACITOR</b>
R235	40143223	"	"	"	22 kΩ	TC201-207	39000011	ECV1ZW	20 x 53N		20 pF
R219	40143393	"	"	"	39 kΩ						
R241, 242	40143473	"	"	"	47 kΩ						
R256	40143823	"	"	"	82 kΩ						
R212,213,215 -217, 220, 234,239,240	40143104	"	"	"	100 kΩ						<b>TRANSFORMER</b>
						T201-208	55003309				#220408
R222, 233	41143104	"	"	1/4	TJ	100 kΩ					
R218	40143224	"	"	1/4S	VJ	220 kΩ					
R236	40143225	"	"	"	2.2 MΩ						
											<b>INDUCTOR</b>
						L211, 212	53020038	Micro Inductor	FL-4H		0.68 μH
						L214	53020005	"	"	"	3.3 μH
						L207, 209	53020006	"	"	"	6.8 μH
VR201-203	49919473	SR19RS			47 kΩB	L213	53020033	"	"	"	10 μH
						L210	53020001	"	"	FL-5H	1 mH
						L208	55003174				#220209
						L202,204,206	55003262				#220324
						L203	55003310				#220416A
C213, 245	31829095	Ceramic Disc	50WV	SL	0.5 pF	L201	55003371				#220535
C222, 242	31820010	"	"	"	CH	L205	55003372	IFT-51S10-H3			
C211,215,218, 236,243,246, 278	31820050	"	"	"	"						
C203, 210	31829100	"	"	"	SL						<b>FERRITE BEADS</b>
C237,247,251	31820100	"	"	"	CH		56000024	Ri 3 x 3-1			
C249	31820150	"	"	"	"						
C228	31829180	"	"	"	SL						
C216	31829200	"	"	"	"		91100008	Wrapping Terminal C			
C219	31829220	"	"	"	"						
C260-265, 269	31820220	"	"	"	CH						
C223	31820270	"	"	"	"						<b>HEAT SINK</b>
C235	31829330	"	"	"	SL		95000004	T0-5, L = 15 mm			
C204,233,234	31829470	"	"	"	"						
C212,214,217, 250	31820470	"	"	"	CH						
C238,241,244	31827470	"	"	"	UJ						<b>***** 50 MHz BOOSTER BOARD *****</b>
C201, 202	31829910	"	"	"	SL	PB-1923	60419230	Printed Circuit Board			
C225	31829101	"	"	"	"		019230AZ	PCB with Components			
C207,208,267, 268	31820101	"	"	"	CH						

		<b>TRANSISTOR</b>	L311	55003377	#220584
Q301	22321660	Transistor 2SC2166			
Q302	22319454	" 2SC1945D			
					<b>TRIMMER CAPACITOR</b>
			TC301	39000011	ECV-1ZW 20 x 40N 20 pF
		<b>DIODE</b>	TC302, 303	39000009	ECV-1ZW 50 x 40N 50 pF
D301,302,308	21090011	Silicon 10D1	TC304, 305	38820080	2222-808-61809 80 pF
D307	21001880	Germanium 1S188FM			
D303-306	21015550	Silicon 1S1555			
					<b>RELAY</b>
			RL301	70000031	FBR-221D012
		<b>RESISTOR</b>			
R303	42124560	Carbon Composition 1/2 GK 56 Ω			
R306	42124101	" " " " 100 Ω			
R305	42124151	" " " " 150 Ω			<b>CONNECTOR</b>
R302	42124221	" " " " 220 Ω	J301	68000003	SO-239
R301, 304 (L302, 305)	42124471	" " " " 470 Ω			
R308	41143102	Carbon Film 1/4S TJ 1 kΩ		91100008	Wrapping Terminal C
R307	40143103	" " " VJ 10 kΩ			
				80050741	Booster Heat Sink
		<b>POTENTIOMETER</b>			
VR301	49906301	EVL-SOAA00B32 300 ΩB			
VR302	49906103	EVL-SOAA00B14 10 kΩB			
					<b>144 MHz UNIT</b>
			Symbol No.	Parts No.	Description
		<b>CAPACITOR</b>			***** MAIN CHASSIS *****
C334	31829095	Ceramic Disc 50WV SL 0.5 pF	C501-506,	32821102	Ceramic Feed Thru ECK-Y1H102WE
C316, 335	31829010	" " " " 1 pF	508, 509,		
C310, 315	31829050	" " " " 5 pF	511-513,		
C302	31829200	" " " " 20 pF	515		
C301, 317	31829330	" " " " 33 pF	C517	36825223	Mylar 50WV 0.022 μF
C307	31829390	" " " " 39 pF			
C320, 329	31829470	" " " " 47 pF			
C323	31829620	" " " " 62 pF			
C314, 324	31829820	" " " " 82 pF			<b>RESISTOR</b>
C321, 328	31829101	" " " " 100 pF	R501	41143473	Carbon Film 1/4S TJ 47 kΩ
C319	31829121	" " " " 120 pF			
C304,306,309, 311,313,318, 326,327,331, 333	30820103	" " " " 0.01 μF			
					***** 144 MHz CONVERTER MAIN BOARD *****
			PB-1925	60419250	Printed Circuit Board
C303,305,308, 312,330,332	36226226	Electrolytic 16WV TW 22 μF		019250AZ	PCB with Components
					<b>IC, FET, TRANSISTOR</b>
		<b>INDUCTOR</b>	Q601	25000101	IC MC-1496G
L314	53010001	Micro Inductor 10 μH	Q610	25000128	" 78L08
L304, 313	55003160	#220196	Q602,605,606	23800510	FET 3SK51
L302, 305	55003262	#220324	Q604	22307300	Transistor 2SC730
L301	55003373	#220527	Q607-609	22307842	" 2SC784R
L303, 306	55003374	#220528	Q611, 612	22318154	" 2SC1815Y
L307	55003375	#220529	Q603	22320530	" 2SC2053
L308-310,312	55003376	#220530			



		DIODE					CAPACITOR			
D601,606,607, 609-614,616	21090113	Silicon	1S553	C614	31829059	Ceramic Disc	50WV	SL	0.5	pF
				C609, 616	31820020	" "	" "	CH	2	pF
D605	21015550	"	1S1555	C612	31820040	" "	" "	" "	4	pF
D602-604,608	21022090	Varactor	1S2209	C613, 615	31827040	" "	" "	UJ	4	pF
				C611, 617	31829050	" "	" "	SL	5	pF
				C641,650-655	31820050	" "	" "	CH	5	pF
				C642	31827050	" "	" "	UJ	5	pF
				C608, 610	31827080	" "	" "	" "	8	pF
X601	71800144	HC-18/U	38.6666 MHz	C604, 637	31829100	" "	" "	SL	10	pF
X602	71800145	"	39.3333 MHz	C631,632,664, 668	31820100	" "	" "	CH	10	pF
X603	71500193	HC-25/U	38.8666 MHz	C639	31829150	" "	" "	SL	15	pF
X604	71500194	"	39.5333 MHz	C658	31820180	" "	" "	CH	18	pF
X605	71500195	"	38.4666 MHz	C665	31829220	" "	" "	SL	22	pF
X606	71500196	"	39.1333 MHz	C626	31829270	" "	" "	" "	27	pF
				C660	31820270	" "	" "	CH	27	pF
				C623	31829330	" "	" "	SL	33	pF
				C627	31829390	" "	" "	" "	39	pF
		<b>CRYSTAL SOCKET</b>		C640	31829470	" "	" "	" "	47	pF
XS601	69010013	S-14-4P		C656	31820680	" "	" "	CH	68	pF
				C601, 602	31829910	" "	" "	SL	91	pF
				C685	31829101	" "	" "	" "	100	pF
				C659	31820101	" "	" "	CH	100	pF
		<b>RESISTOR</b>		C607,618,619, 621,622,624, 625,628,630, 633-635,643, 657,662,663, 667,669,672, 673,678,679	30820102	" "	" "	" "	0.001	μF
R624	40143100	Carbon Film	1/4S VJ	10 Ω						
R638	40143220	" "	" "	22 Ω						
R609,620,621, 625,633	40143560	" "	" "	56 Ω						
R604,608,611, 614,651,655, 659	40143101	" "	" "	100 Ω						
R629	40143221	" "	" "	220 Ω	C605,606,636, 638,644-649, 661, 680, 682-684	30820103	" "	" "	0.01	μF
R647 (L613)	42124471	" Composition	1/2 GK	470 Ω						
R665	41143471	" Film	1/4S TJ	470 Ω						
R650,654,658	40143471	" "	" VJ	470 Ω						
R602, 622	40143561	" "	" "	560 Ω	C620,629,670, 671,681	34220106	Electrolytic	16WV	TW	10 μF
R640-645	40143681	" "	" "	680 Ω						
R605	41143821	" "	" TJ	820 Ω						
R601,603,607, 634,635,660	40143102	" "	" VJ	1 kΩ						
R626,637,639	40143122	" "	" "	1.2 kΩ						
R606	40143152	" "	" "	1.5 kΩ	TC601	39000010	ECV-1ZW	10 x 53N		10 pF
R652, 656	40143472	" "	" "	4.7 kΩ	TC602, 603, 606-612	39000011	ECV-1ZW	20 x 53N		20 pF
R623	41143682	" "	" TJ	6.8 kΩ	TC604, 605	39000005	ECV-1ZW	50 x 32N		50 pF
R610, 666	40143104	" "	" VJ	10 kΩ						
R618,619,628, 653,657	40143223	" "	" "	22 kΩ						
R617,631,632	40143473	" "	" "	47 kΩ						
R612,613,615, 616,630,636	40143104	" "	" "	100 kΩ						
R627	40143225	" "	" "	2.2 MΩ	L605	53020038	Micro Inductor	FL-4H		0.68 μH
R646	40143331	" "	" "	330 Ω	L610,612,614	53020004	" "	" "		2.2 μH
					L611	53020006	" "	" "		6.8 μH
					L606, 608	55003090	" "	" "		#220193
					L602	55003092	" "	" "		#220195
					L603,604,609	55003093	" "	" "		#220196
VR601	49905472	SR19RS	4.7 kΩB	L613	55003120	" "	" "	" "		#220206
VR602	49905473	SR19RS	47 kΩB	L607	55003294	" "	" "	" "		#220380
				L601	5503371	" "	" "	" "		#220535

		<b>TRANSFORMER</b>			C710, 712	31829010	Ceramic Disc	50WV	SL	1 pF
T604	54140910	R12-4091	#220105	C713	31829020	"	"	"	"	2 pF
T602, 603, 606-608	54141020	R12-4102	#220111	C708,716,717	31829150	"	"	"	"	15 pF
				C706	31829200	"	"	"	"	20 pF
T605	54141800	R12-4180	#220166	C707	31829330	"	"	"	"	33 pF
T601	55003378		#220536	C705,711,714, 715	30820102	"	"	"		0.001 μF
				C701-704	34220106	Electrolytic	16WV	TW		10 μF
		<b>HEAT SINK</b>								
	95000004	TO-5, L = 15 mm								
						<b>INDUCTOR</b>				
				L707	55003380					#220069
				L701, 704	55003262					#220324
		<b>FERRITE BEADS</b>			L706, 708	55003306				#220430
	56000024	Ri 3 x 3-1			L702, 703					#220469
				L705						L0020654
	91100008	Wrapping Terminal C								
						<b>RELAY</b>				
				RL701	70000035	FBR-221D012				
<b>***** 144 MHz BOOSTER BOARD *****</b>										
PB-1926	60419260 019260AZ	Printed Circuit Board PCB with Components								
PB-1927	60419270 019270AZ	Printed Circuit Board PCB with Components					<b>RECEPTACLE</b>			
				J701	68000003	SO-239				
						91100008	Wrapping Terminal C			
		<b>POWER MODULE</b>								
Q701	78000002		VP-20BL							
<b>***** RESONATOR BOARD *****</b>										
				PB-1800	60418000 018000AZ	Printed Circuit Board PCB with Components				
		<b>DIODE</b>								
D704	21090011	Silicon	10D1							
D701	21001880	Germanium	1S188FM							
D702, 703	21015550	Silicon	1S1555							
						<b>CAPACITOR</b>				
				C1005-1008	31820050	Ceramic Disc	50WV	CH		5 pF
				C1001-1004	31820150	"	"	"	"	15 pF
		<b>RESISTOR</b>								
R705	40143472	Carbon Film	1/4S VJ	4.7 kΩ		<b>TRIMMER CAPACITOR</b>				
R706	40143473	"	"	47 kΩ	T1001-1004	39000010	ECV-1ZW	10x53N		10 pF
R701 (L702), 704 (L704)	42124471	Carbon Composition ½ GK		470 Ω		<b>INDUCTOR</b>				
R702 (L702), 703 (L703)	42144471	"	"	¼ "	470 Ω	L1001	55003381			#220252
						80044942	Resonator Case			
		<b>POTENTIOMETER</b>								
VR701	49906301	EVL-SOAA00B32		300 ΩB		91100008	Wrapping Terminal C			
VR702	49906103	EVL-SOAA00B14		10 kΩB						
		<b>CAPACITOR</b>								
	31829059	Ceramic Disc	50WV	SL	0.5 pF					

430 MHz UNIT			C1231	36825473	Mylar	50WV	0.047 $\mu$ F
Symbol No.	Parts No.	Description	C1230	34220106	Electrolytic	16WV	TW 10 $\mu$ F
***** MAIN CHASSIS *****							
C1101-1108, 1110-1115	32821102	Ceramic Feed Thru ECK-Y1H102WE					
					<b>TRIMMER CAPACITOR</b>		
			TC1201, 1204 -1206	39000016	ECV-1ZW 04 x 53N		4 pF
***** 430 MHz RF BOARD *****			TC1202, 1203	39000010	ECV-1ZW 10 x 53N		10 pF
PB-1929	60419290	Printed Circuit Board					
	019290AZ	PCB with Components					
					<b>INDUCTOR</b>		
			L1214	53020033	Micro Inductor FL-4H		10 $\mu$ H
		<b>TRANSISTOR</b>	L1202, 1204, 1205, 1207- 1210	55003382			# 220469
Q1203	22314240	Transistor 2SC1424					
Q1204, 1205	22318154	" 2SC1815Y					
Q1201, 1202	22323690	" 2SC2369	L1211, 1212	55003383			# 220471
			L1203, 1206	55003384			# 220472
			L1213	55003385			# 220474
			L1201	55003386			# 220523
		<b>DIODE</b>					
D1203	21090113	Silicon 1SS53					
D1201	21015550	" 1S1555					
***** 430 MHz BOOSTER BOARD *****							
			PB-1935	60419350	Printed Circuit Board		
				019350AZ	PCB with Components		
		<b>RESISTOR</b>					
R1215	40143820	Carbon Film 1/4S VJ 82 $\Omega$					
R1205, 1210	40143101	" " " " 100 $\Omega$					
R1204	40143221	" " " " 220 $\Omega$					<b>POWER MODULE</b>
R1203(L1202), 1206(L1204), 1209(L1205), 1211(L1207), 1216-1218 (L1208-1210)	42144471	Carbon Composition 1/4 GK 470 $\Omega$	Q1301	78000003			VP-07BL
					<b>DIODE</b>		
			D1301	21090011	Silicon		10D1
R1212, 1213	40143102	Carbon Film 1/4S VJ 1 k $\Omega$	D1302-1304	21001880	Germanium		1S188FM
R1201, 1207, 1223	40143152	" " " " 1.5 k $\Omega$					
R1202, 1208, 1214, 1225	40143103	" " " " 10 k $\Omega$					
					<b>RESISTOR</b>		
				42124220	Carbon Composition 1/2 GK		22 $\Omega$
				42124270	" " " " "		27 $\Omega$
			R1301(L1308), 1302(L1309), 1304(L1301), 1305(L1302)	42144471	" " 1/4 " "		470 $\Omega$
		<b>POTENTIOMETER</b>					
VR1201-1203	49905473	SR19RS 47 k $\Omega$ B					
		<b>CAPACITOR</b>					
C1202, 1203	31829030	Ceramic Disc 50WV SL 3 pF			<b>POTENTIOMETER</b>		
C1216, 1218	31820050	" " " CH 5 pF	VR1301	49908506	EVN-A00B32		300 $\Omega$ B
C1212	31820200	" " " " 20 pF					
C1201, 1221, 1222, 1229	30820102	" " " " 0.001 $\mu$ F					
C1204-1211, 1213, 1215, 1228	30825102	" HDC60E102M 0.001 $\mu$ F			<b>CAPACITOR</b>		
			C1304, 1309	31829020	Ceramic Disc 50WV SL		2 pF
			C1308	30820102	" " " " "		0.001 $\mu$ F
C1214, 1226	30325103	" Chip 25 V 0.01 $\mu$ F	C1301, 1302	34220106	Electrolytic 16WV TW		10 $\mu$ F



											<b>CRYSTAL</b>	
				X1601	71800146	HC-18/U						67.000 MHz
				X1602	71800147	"						67.333 MHz
			<b>CAPACITOR</b>	X1603	71800148	"						67.666 MHz
C1524, 1525	31820059	Ceramic Disc	50WV CH	0.5 pF	X1604	71800149	HC-25/U					68.000 MHz
C1526	31820020	"	"	"	2 pF	X1605	71800150	"				68.333 MHz
C1513, 1514	31820030	"	"	"	3 pF							
C1502-1505	31820080	"	"	"	8 pF							
C1515	31829100	"	"	"	SL	10 pF						
C1523	31829270	"	"	"	"	27 pF					<b>RESISTOR</b>	
C1506, 1507	31820620	"	"	"	CH	62 pF	R1616	40143101	Carbon Film	1/4S	VJ	100 Ω
C1511, 1512, 1516	30825102	"	HDC60E102M	0.001 μF	R1618	41143101	"	"	"	"	TJ	100 Ω
					R1614	40143221	"	"	"	"	VJ	220 Ω
C1517-1522	32821102	"	Feed Thru	50WV	0.001 μF	R1601	40143331	"	"	"	"	330 Ω
C1501	30820102	"	Disc	50WV	0.001 μF	R1612, 1615	40143471	"	"	"	"	470 Ω
C1508-1510	30820103	"	"	"	0.01 μF	R1607-1611	41143681	"	"	"	TJ	680 Ω
						R1617	40143272	"	"	"	VJ	2.7 kΩ
						R1602, 1603, 1605, 1606	40143103	"	"	"	"	10 kΩ
			<b>TRIMMER CAPACITOR</b>	R1604	41143103	"	"	"	"	"	TJ	10 kΩ
TC1501-1504, 1509	39000017	ECV-1ZW	06 x 53N	6 pF	R1613	40143273	"	"	"	"	VJ	27 kΩ
TC1505-1508	39000010	ECV-1ZW	10 x 53N	10 pF								
											<b>CAPACITOR</b>	
						C1625	31829059	Ceramic Disc	50WV	SL		0.5 pF
			<b>INDUCTOR</b>	C1631	31820010	"	"	"	"	CH		1 pF
L1505, 1513	55003393	AT0706HHQ5B252A			C1623, 1626	31820040	"	"	"	"		4 pF
L1507, 1510, 1511	55003382		#220469		C1602-1606	31820050	"	"	"	"		5 pF
					C1613	31820100	"	"	"	"		10 pF
L1506	55003389		#220470		C1616	31820270	"	"	"	"		27 pF
L1501-1504, 1508, 1509	55003383		#220471		C1601, 1614	31820470	"	"	"	"		47 pF
L1512	55003390		#220476		C1607-1611, 1621, 1622, 1624, 1627-1630	30820102	"	"	"	"		0.001 μF
					C1615, 1617	30820103	"	"	"	"		0.01 μF
			<b>HERMETIC SEAL</b>	C1620	30820473	"	"	"	"	"		0.047 μF
	91001102	A102			C1618, 1619	34220106	Electrolytic	16WV	TW			10 μF
			<b>***** LOCAL BOARD *****</b>								<b>TRIMMER CAPACITOR</b>	
PB-1934	60419340	Printed Circuit Board			TC1601-1605	39000011	ECV-1ZW	20 x 53N				20 pF
	019340AZ	PCB with Components										
											<b>INDUCTOR</b>	
			<b>IC, TRANSISTOR</b>	L1601	53020001	Micro Inductor	FL-4H					1 μH
Q1603	25000128	IC	78L08	L1602	53030011	TM-80160						
Q1601	22307842	Transistor	2SC784R									
Q1602	22314240	"	2SC1424									
											<b>TRANSFORMER</b>	
				T1601, 1602	55003394	MB-80050						
			<b>DIODE</b>									
D1601-1605	21090113	Silicon	1SS53									
					91100008	Wrapping Terminal C						

POWER SUPPLY UNIT						POTENTIOMETER	
Symbol No.	Parts No.	Description		VR1701	49906202	EVL-S0AA00B23 2 kΩB	
***** MAIN CHASSIS *****							
		<b>TRANSISTOR</b>				<b>CAPACITOR</b>	
Q1708	22490003	MJE3055		C1707	30820102	Ceramic Disc	50WV 0.001 μF
				C1703, 1705	30820103	" "	0.01 μF
				C1704	30820473	" "	0.047 μF
				C1706	34329105	Electrolytic	25WV TW 1 μF
		<b>DIODE</b>		C1702	34329108	" "	1000 μF
D1707	21090118	Silicon Bridge	S4VB	C1701	34529002	"	35WV R 1000 μF
		<b>CAPACITOR</b>				<b>RELAY</b>	
C1708	34520109	Electrolytic	35WV TW 10000 μF	RL1701	70000031	FBR211D012	
C1709, 1710	30240472	Ceramic Disc	1.4 KV 0.0047 μF				
		<b>POWER TRANSFORMER</b>		P1701	67110001	<b>PLUG</b>	
PT1701	52000046		#230025			5079-11A	
		<b>FUSE</b>				<b>FUSE</b>	
F1702	73000002	(100-117 V)	2A	F1701	73000004		5A
	73000001	(200-234 V)	1A			<b>FUSE HOLDER</b>	
		<b>FUSE HOLDER</b>		FH1701	69030007	F3265	
FH1702	69030004	F3292					
					91100008	Wrapping Terminal C	
		<b>POWER SUPPLY BOARD</b>					
PB-1945	60419450	Printed Circuit Board					
	019450AZ	PCB with Components					
				ALC AMP UNIT			
		<b>IC, TRANSISTOR</b>		Symbol No.	Parts No	Description	
Q1702	25000074	IC	TA7089M	PB-1946	60419460	Printed Circuit Board	
Q1706	25000116	"	μPC14308		019460AZ	PCB with Components	
Q1703-1705	22318154	Transistor	2SC1815Y				
Q1701	22402353	"	2SD235-O				
						<b>FET</b>	
				Q1801	23800594		3SK59Y
		<b>DIODE</b>					
D1701-1705	21090011	Silicon	10D1				
D1706	21090036	Zener	WZ-110			<b>DIODE</b>	
				D1801, 1802	21015550	Silicon	1S1555
				D1803	21090138	Varistor	MV103
		<b>RESISTOR</b>					
R1707	40143121	Carbon Film	1/4S VJ 120 Ω				
	40143271	" "	" " 270 Ω			<b>RESISTOR</b>	
R1703	42124102	Carbon Composition	1/2 GK 1 kΩ	R1802	40143221	Carbon Film	1/4 VJ 220 Ω
R1702	40143332	Carbon Film	1/4S VJ 3.3 kΩ	R1808	40143102	" "	" " 1 kΩ
R1701	40143123	" "	" " 12 kΩ	R1806	40143152	" "	" " 1.5 kΩ
R1704-1706	40143223	" "	" " 22 kΩ	R1803	40143103	" "	" " 10 kΩ
				R1801, 1809	40143223	" "	" " 22 kΩ
				R1807	40143273	" "	" " 27 kΩ

R1804	40143274	Carbon Film 1/4 VJ 270 kΩ			
					<b>RESISTOR</b>
		<b>POTENTIOMETER</b>	R1906	40143220	Carbon Film 1/4 VJ 22 Ω
VR1801	49906103	EVL-S0AA00B14 10 kΩB	R1901	40143102	" " " " 1 kΩ
VR1802, 1803	49906503	EVL-S0AA00B54 50 kΩB	R1902, 1903	40143103	" " " " 10 kΩ
			R1904, 1905	40143223	" " " " 22 kΩ
		<b>CAPACITOR</b>			
C1801, 1809	31829100	Ceramic Disc 50WV SL 10 pF			<b>POTENTIOMETER</b>
C1812	31829910	" " " " 91 pF	VR1901-1912	49906503	EVL-S0AA00B54 50 kΩB
C1810	31829111	" " " " 110 pF			
C1811	31829181	" " " " 180 pF			
C1815-1818	32821102	Ceramic Feed Thru ECK-Y1H102WE			
C1804	30830102	Ceramic Disc 50WV 0.001 μF			<b>CAPACITOR</b>
C1802, 1803, 1805, 1807, 1808, 1814	30820103	" " " 0.01 μF	C1915	31829010	Ceramic Disc 50WV SL 1 pF
			C1901-1914, 1916, 1918, 1919	30820103	" " " 0.01 μF
			C1917	34220476	Electrolytic 16WV TW 47 μF
			C1920	34320477	" 25WV TW 470 μF
		<b>INDUCTOR</b>			
L1801, 1804		Micro Inductor FL-5H 47 μH			
L1802, 1803	55003371	#220535			
					<b>RELAY</b>
			RL1901	70000031	FBR211D012
		<b>TRANSFORMER</b>			
T1801	52000047	R12-4434 #220180		91100008	Wrapping Terminal C
		<b>HERMETIC SEAL</b>	<b>LED UNIT</b>		
	91001102	A-102	Symbol No.	Parts No.	Description
			PB-1948	60419480	Printed Circuit Board
				019480AZ	PCB with Components
	91100008	Wrapping Terminal C			
					<b>LED</b>
			Q2001-2009	20900140	GD4-203SRD
<b>VR UNIT</b>					
Symbol No.	Parts No.	Description			
PB-1947	60419470	Printed Circuit Board			<b>RESISTOR</b>
	019470AZ	PCB with Components	R2001-2009	41143681	Carbon Film 1/4 TJ 680 Ω
		<b>TRANSISTOR</b>			
Q1901, 1902	22318154	2SC1815Y			
		<b>DIODE</b>			
D1901-1915	21015550	Silicon 1S1555			
D1916, 1917	21090011	" 10D1			





